INSTALLATION INSTRUCTIONS


PVC Bath Waste & Overflow (Pivoting Head) Part #'s: 335-LT, 345-LT





TRIM SOLD SEPARATELY



INSTALLATION

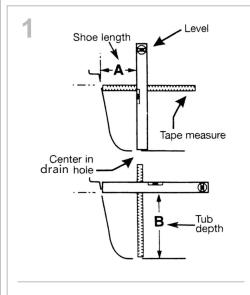

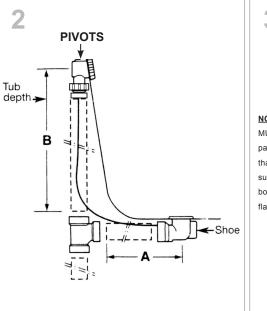

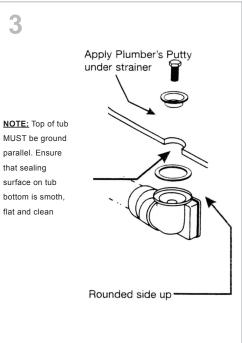


A > Measure distance from center of drain hole to center of overflow hole.


 $\mathsf{B} \mathrel{\scriptsize{\scriptsize{\scale}}}$ Measure height from center of drain hole to center of overflow hole.

Install using PVC 1¹/₂" Schedule 40 DWV pipe in compliance with ASTM D 2665-89a **ONLY.**

Mount Drain to tub with supplied drain screw.

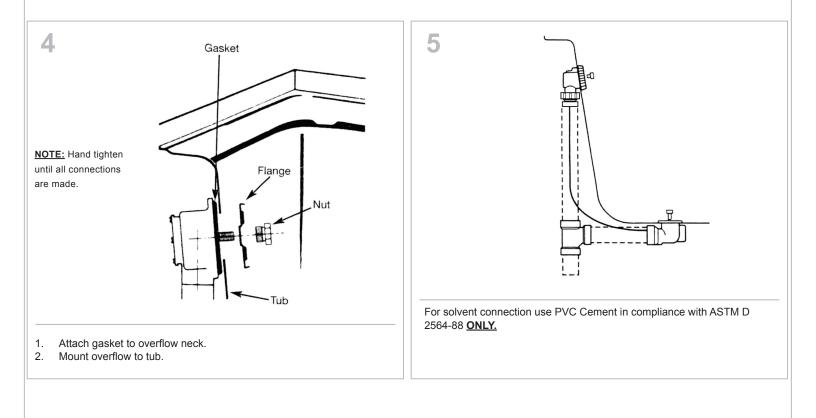

CREATED 2.25.2019

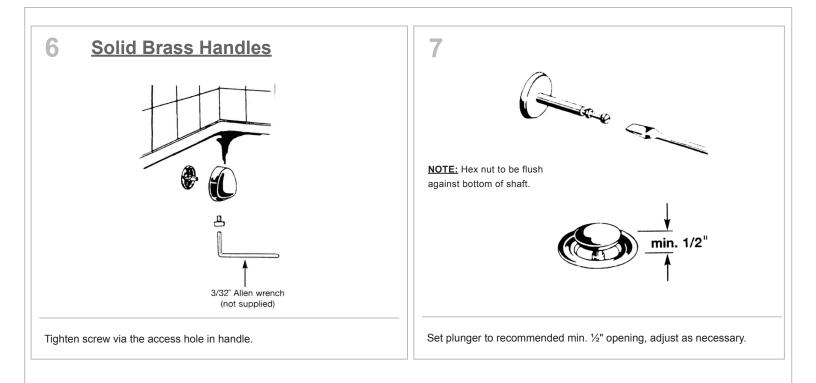


To operate drain, simply turn handle 1/8 turn (clockwise opens, counter-clockwise closes).

TROUBLESHOOTING

Drain leaks around plunger	 Check plunger O-ring for cuts or nicks Check that strainer flange is level Check plunger screw adjustment Check tub surfaces. Ensure that they are smooth, flat, amd clean.
Leaks around strainer flange	Check that strainer flange is level & flush with tub surfaceCheck that plumber's putty is applied evenly
Water closes plunger when draining	 Wrong size drain Cable too long Secure cable to overflow neck. Recommened using cable tie (not provided)

REPLACEMENT PARTS

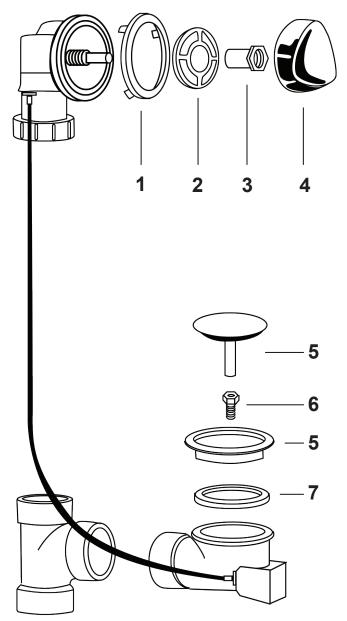

REPLACEMENT PARTS		
#	PART NUMBER	DESCRIPTION
1	521-WASHER	Stainless Steel Shower Head
2	521-P	Curvetta 90° 3/4M 1/2M
3	521-NUT	Flexible hose 39 3/8" ½"F x ½"F
4	521-H , 321-H	False Ceiling Plugs
5	521-SP	Screws
6	521-NUT	Template
7	521-WASHER	Adaptor Connection ½"M x ½"M

CREATED 2.25.2019

To learn more about JACLO's warranty, please visit **jaclo.com**