

INSTALLATION INSTRUCTIONS

Woodrow Wall Faucet

Rough Valve for Woodrow Wall Faucet Part #: 5550-RGH Woodrow Wall Faucet Trim Part #'s: 8220-W-WT459-TR (Lever), 8220-W-WT462-TR (Cross)

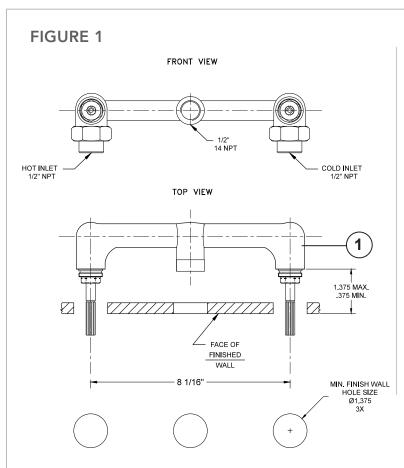

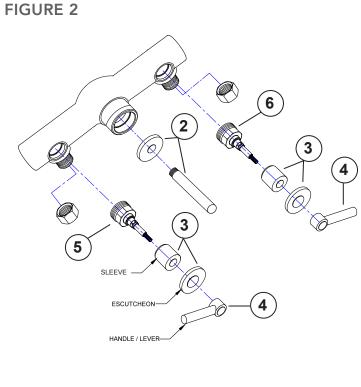



COMPONENT PARTS	
1	Rough Valve - RNY5550-EXT-RGH
2	Spout - 8110-WALL-SPOUT-***
3	Sleeve & Escutcheon (2) H-4601-***
4	Handle (2) - H-459-*** (Lever) / H-462-*** (Cross)
5	Hot Cartridge - 5550-EXT-HOT-CART
6	Cold Cartridge - 5550-EXT-COLD-CART

INSTALLATION

- 1. Install mixer and valve assembly in wall (Figure 1). Note: min/max dimensions from finished wall and min. finished wall hole sizes
- 2. Plumb hot and cold inlet with appropriate fittings
- 3. Install finished wall
- 4. Slide escutcheon onto spout
- 5. Using suitable thread sealant, thread spout into center outlet (Figure 2)
- 6. Thread trim cylinders onto hot and cold valves
- 7. Slide escutcheons onto trim cylinders and push up to finished wall
- 8. Install hot and cold lever or cross handles and tighten set screws

Note: Socket size needed to remove cartridge is 17MM

REVISED 2.8.201

