

# INSTALLATION INSTRUCTIONS

## Contempo Wall Faucet

Rough Valve for Contempo Wall Faucet Part #: 5550-RGH

Contempo Wall Faucet Trim Part #'s: 9880-W-WT459-TR (Lever), 9880-W-WT462-TR (Cross)

# JACLO®

Confidence from start to finish.™

FIGURE 1


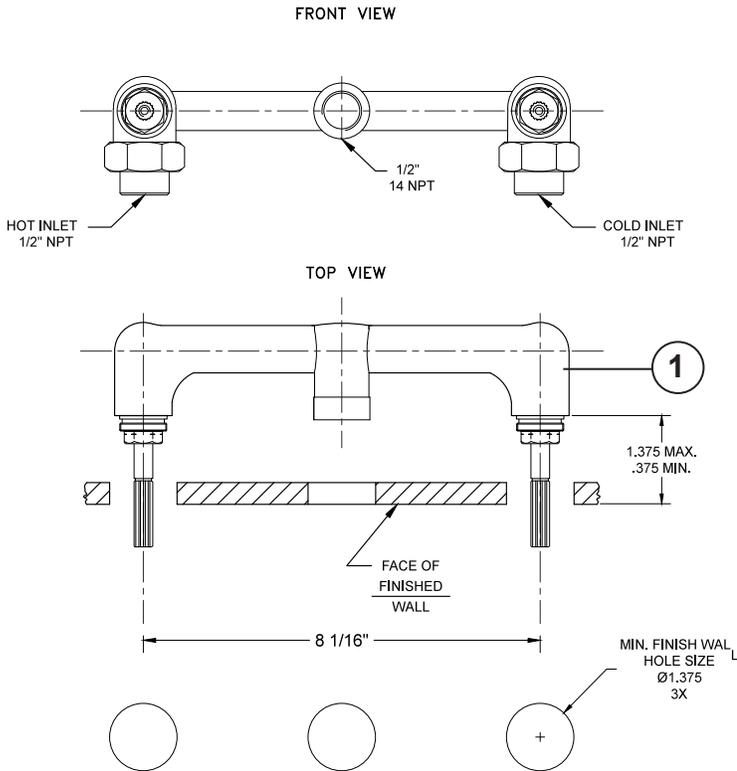


FIGURE 2

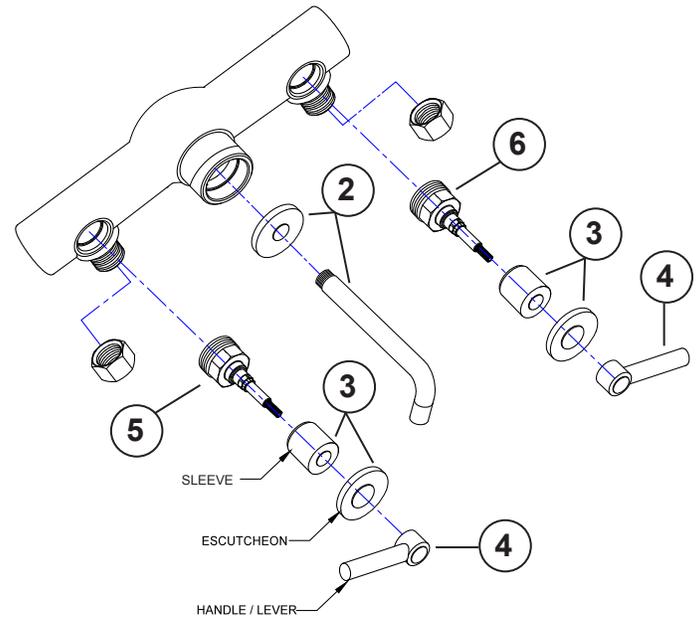

COMPONENT PARTS	
1	Rough Valve - 5550-RGH
2	Spout - A-428-***
3	Sleeve & Escutcheon (2) H-4601-***
4	Handle (2) - H-459-*** (Lever) / H-462-*** (Cross)
5	Hot Cartridge - 5550-HOT-CART-RGH
6	Cold Cartridge - 5550-COLD-CART-RGH

## INSTALLATION

1. Install mixer and valve assembly in wall (Figure 1). Note: min/max dimensions from finished wall and min. finished wall hole sizes
2. Plumb hot and cold inlet with appropriate fittings
3. Install finished wall
4. Slide escutcheon onto spout
5. Using suitable thread sealant, thread spout into center outlet (Figure 2)
6. Thread trim cylinders onto hot and cold valves
7. Slide escutcheons onto trim cylinders and push up to finished wall
8. Install hot and cold lever or cross handles and tighten set screws

**Note: Socket size needed to remove cartridge is 17MM**

**WARNING: DO NOT OVER TIGHTEN THE UNION ADAPTER. This will cause internal stress in the material and may lead to fracture over time. Max torque for 1/2" NPT is 61nM (45lb/ft).**

To learn more about JACLO's warranty, please visit [\*\*jaclo.com\*\*](http://jaclo.com)