
INSTALLATION INSTRUCTIONS

Exacto™ Volume Control Valves

Part #'s: J-VC34, J-VC12



INSTALLER WARNING: Follow all applicable Local Plumbing Codes, Public Health and Safety Codes

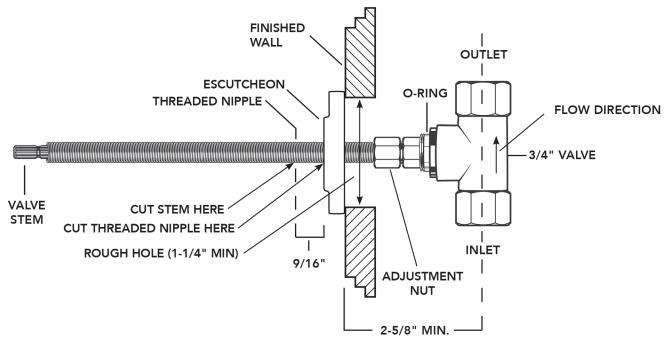

Valve Installation

- 1. Remove valve cartridge from body if soldering connections at valve body
- 2. Use appropriate fittings for valve inlet and outlet
- 3. Minimum rough hole 1-1/4". Maximum size to escutcheon used
- 4. Install inlet and outlet so minimum position of valve is 2-5/8" from finished wall
- 5. Valve is directional! Note arrow on valve body for direction of water flow, install accordingly

Valve Escutcheon and Stem Sizing

- 1. Screw escutcheon on to threaded nipple until flush with wall
- 2. Mark threaded nipple flush with escutcheon
- 3. Remove threaded nipple and cut at mark
- 4. Measure 9/16" from threaded nipple, cut stem here

Handle Adjustment (J-VC34 only)

- 1. Turn valve to full off position counter-clockwise facing valve from outside wall view
- 2. Temporarily install valve handle on valve stem spline
- 3. Using 17mm wrench, loosen adjustment nut
- 4. Rotate handle and valve assembly to desired "off" position
- 5. Remove handle and tighten adjustment nut
- 6. Apply suitable caulk to back of escutcheon and install on threaded nipple flush to wall
- 7. Reinstall handle on valve stem spline



CREATED 5.2014

