

INSTALLATION INSTRUCTIONS

**Cartridge for 1/2" Thermostatic Valve with Integral
Volume Control**
Part #: 304436-RGH

JACLO®
Confidence from start to finish.™



RECOMMENDED TOOLS

11/16" SOCKET


SMALL LONG FLAT TIPPED SCREW DRIVER

PREPARATION

MAKE SURE WATER IS TURNED OFF, AND RUN ANOTHER FUNCTION ON THAT LINE TO RELIEVE PRESSURE IN LINE.

REMOVAL

1. Remove handle and trim.
2. Shut off water supply check stops located on thermostatic valve.
3. Remove cartridge using 11/16" Socket.
4. Using long flat tipped thin screwdriver remove BROACH, set aside for re-assembly.
5. Check for any debris in valve.

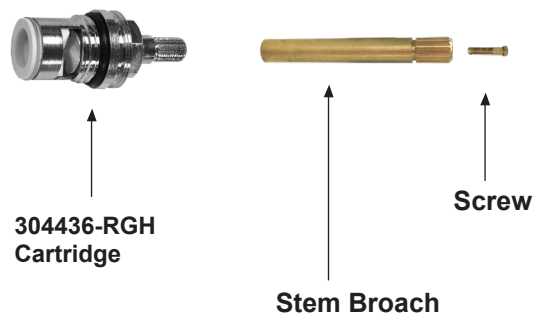

INSTALLATION

1. Install new cartridge by SCREWING CLOCKWISE. **DO NOT OVER TIGHTEN**
2. Turn on water and check for leaks.
3. Replace BROACH and SECURE TO VALVE.
4. Replace Trim.

To learn more about JACLO's warranty, please visit [**jaclo.com**](http://jaclo.com)