
INSTALLATION INSTRUCTIONS


1½" Schedule 40 PVC Cable Drains Part #'s: 370-LT, 372-LT, 374-LT, 376-LT

TRIM SOLD SEPARATELY




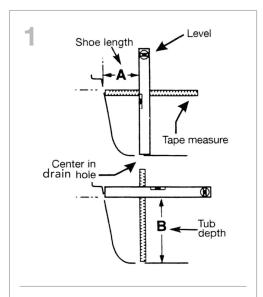


- A Measure distance from center of drain hole to center of overflow hole.
- B Measure height from center of drain hole to center of overflow hole.

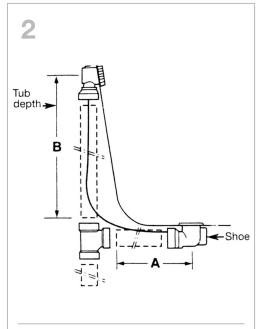



Install using PVC 1½" Schedule 40 DWV pipe in compliance with ASTM D $\,$ 2665-89a $\,$ ONLY.

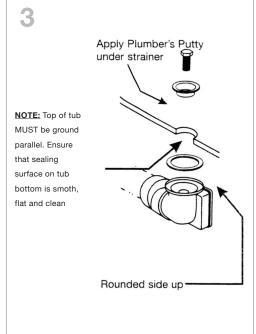


Mount Drain to tub with supplied drain screw.

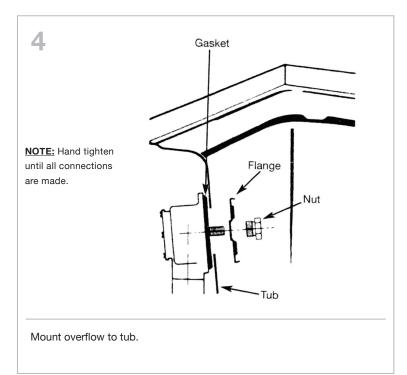

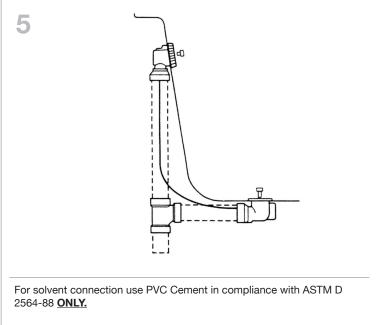


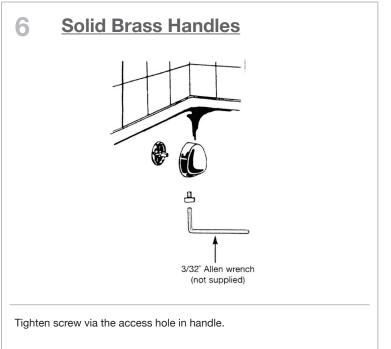

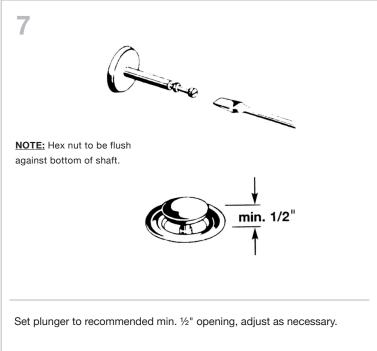

To operate drain, simply turn handle 1/8 turn (clockwise opens, counter-clockwise closes).

Jaclo 11/2" Tubular Bath Waste and Overflow Replacement Parts

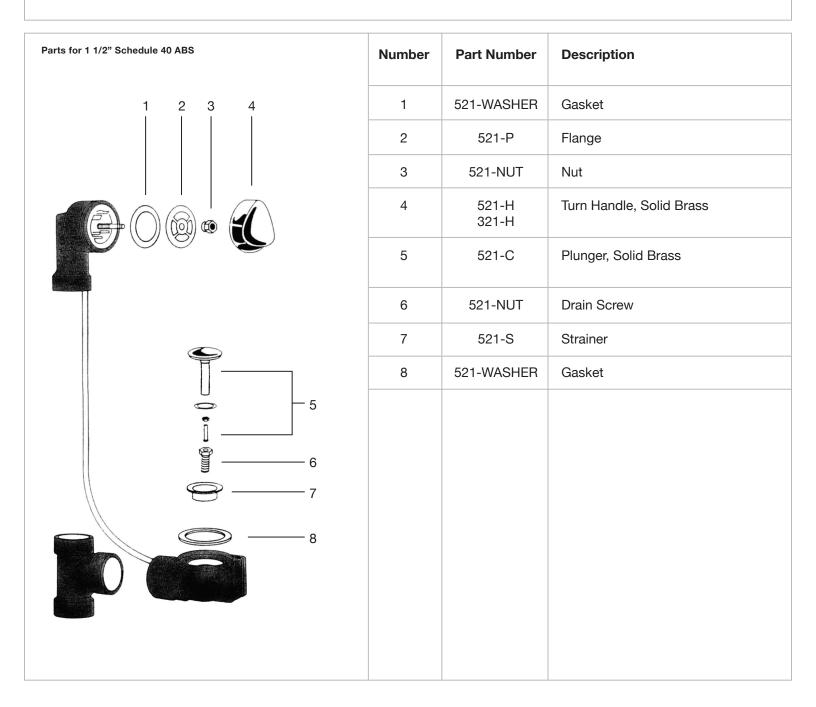

Troubleshooting

Drain leaks around plunger	 Check plunger O-ring for cuts or nicks Check that strainer flange is level Check plunger screw adjustment Check tub surfaces. Ensure that they are smooth, flat, amd clean.
Leaks around strainer flange	 Check that strainer flange is level & flush with tub surface Check that plumber's putty is applied evenly
Water closes plunger when draining	 Wrong size drain Cable too long Secure cable to overflow neck. Recommend using cable tie (not provided)

