
## INSTALLATION INSTRUCTIONS

**Direct Outlet Tub Drain with Pivot Neck** Part #: 399-1537-





**PARTS** 

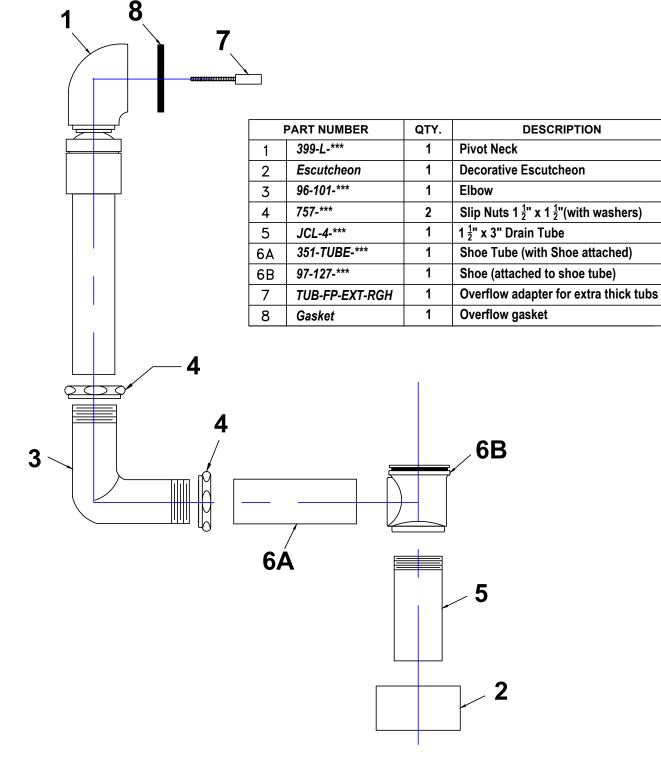

## \*\*NOTE: ENSURE THAT TRIM (ORDERED SEPARATELY) IS PRESENT FOR INSTALLATION AS IT IS REQUIRED FOR FITTING

CREATED 11.29.2018

DESCRIPTION

## INSTALLATION

- 1. Test fit all pieces, Shoe (**6B**) and Shoe Tube (**6A**), Drain Tube (**5**), Elbow (**3**) and Pivot Neck (**1**) by temporarily fitting drain strainer in tub.
- 2. Measure tubes and cut to size.
- 3. Install Drain Tube (5) to Elbow (3). Use one 757 Slip Nut (4) for Drain Tube (drain tube screws into shoe).
- 4. Install Shoe (**6B**) and Shoe Tube (**6A**), rubber washer under tub, on Shoe (**6B**). Screw in the drain, using appropriate sealant. Slide Escutcheon (**2**) over drain tube (**5**).
- 5. Install Pivot Neck (1) to tub at overflow and affix using overflow trim piece. The overflow adapter (7) is included for extra thick tubs.
- 6. Attach Pivot Neck (1) to Elbow (3) using 757 Slip Nut (4).

To learn more about JACLO's warranty, please visit **jaclo.com**