


INSTALLATION INSTRUCTIONS

Bottom Outlet Tub Drain with Pivot Neck
Part #: 399-2537-

JACLO[®]
Confidence from start to finish.[®]



PARTS

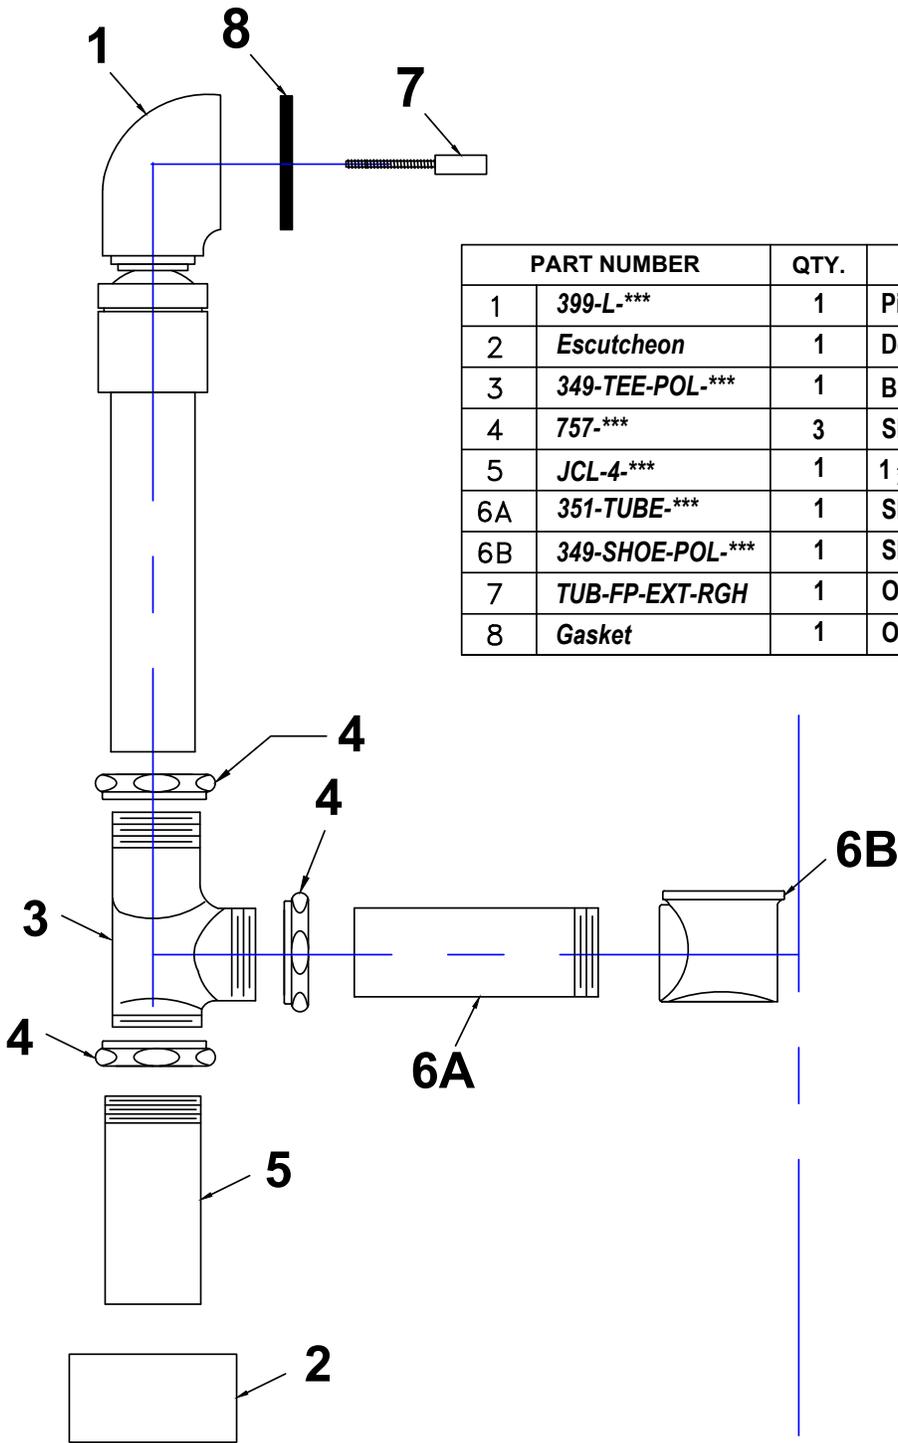

	PART NUMBER	QTY.	DESCRIPTION
1	399-L-***	1	Pivot Neck
2	Escutcheon	1	Decorative Escutcheon
3	349-TEE-POL-***	1	Brass 1 1/2" x 1 1/2" Tee
4	757-***	3	Slip Nuts 1 1/2" x 1 1/2" (with washers)
5	JCL-4-***	1	1 1/2" x 3" Drain Tube
6A	351-TUBE-***	1	Shoe Tube (with Shoe attached)
6B	349-SHOE-POL-***	1	Shoe (attached to shoe tube)
7	TUB-FP-EXT-RGH	1	Overflow adapter for extra thick tubs
8	Gasket	1	Overflow gasket

****NOTE: ENSURE THAT TRIM (ORDERED SEPARATELY) IS PRESENT FOR INSTALLATION AS IT IS REQUIRED FOR FITTING**

INSTALLATION

1. Test fit all pieces, Shoe (**6B**) and Shoe Tube (**6A**), Pivot Neck (**1**), Tee (**3**) and Drain Tube (**5**) by temporarily fitting drain strainer in tub.
2. Measure tubes and cut to size.
3. Install Drain Tube (**5**), Escutcheon (**2**), Tee (**3**). Use one 757 Slip Nut (**4**) for Drain Tube (drain tube screws into shoe).
4. Install Shoe (**6B**) and Shoe Tube (**6A**), rubber washer under tub, on Shoe (**6B**). Screw in the drain, using appropriate sealant. Use one 757 Slip Nut (**4**) to connect Shoe Tube to Tee.
5. Install Pivot Neck (**1**) to tub at overflow and affix using overflow trim piece. *The overflow adapter (7) is included for extra thick tubs.*
6. Attach Pivot Neck (**1**) to Tee (**3**) using 757 Slip Nut (**4**).

To learn more about JACLO's warranty, please visit [**jaclo.com**](http://jaclo.com)