


INSTALLATION INSTRUCTIONS

Side Outlet Tub Waste with Pivot Neck

Part #399-3537

JACLO®

Confidence from start to finish.™

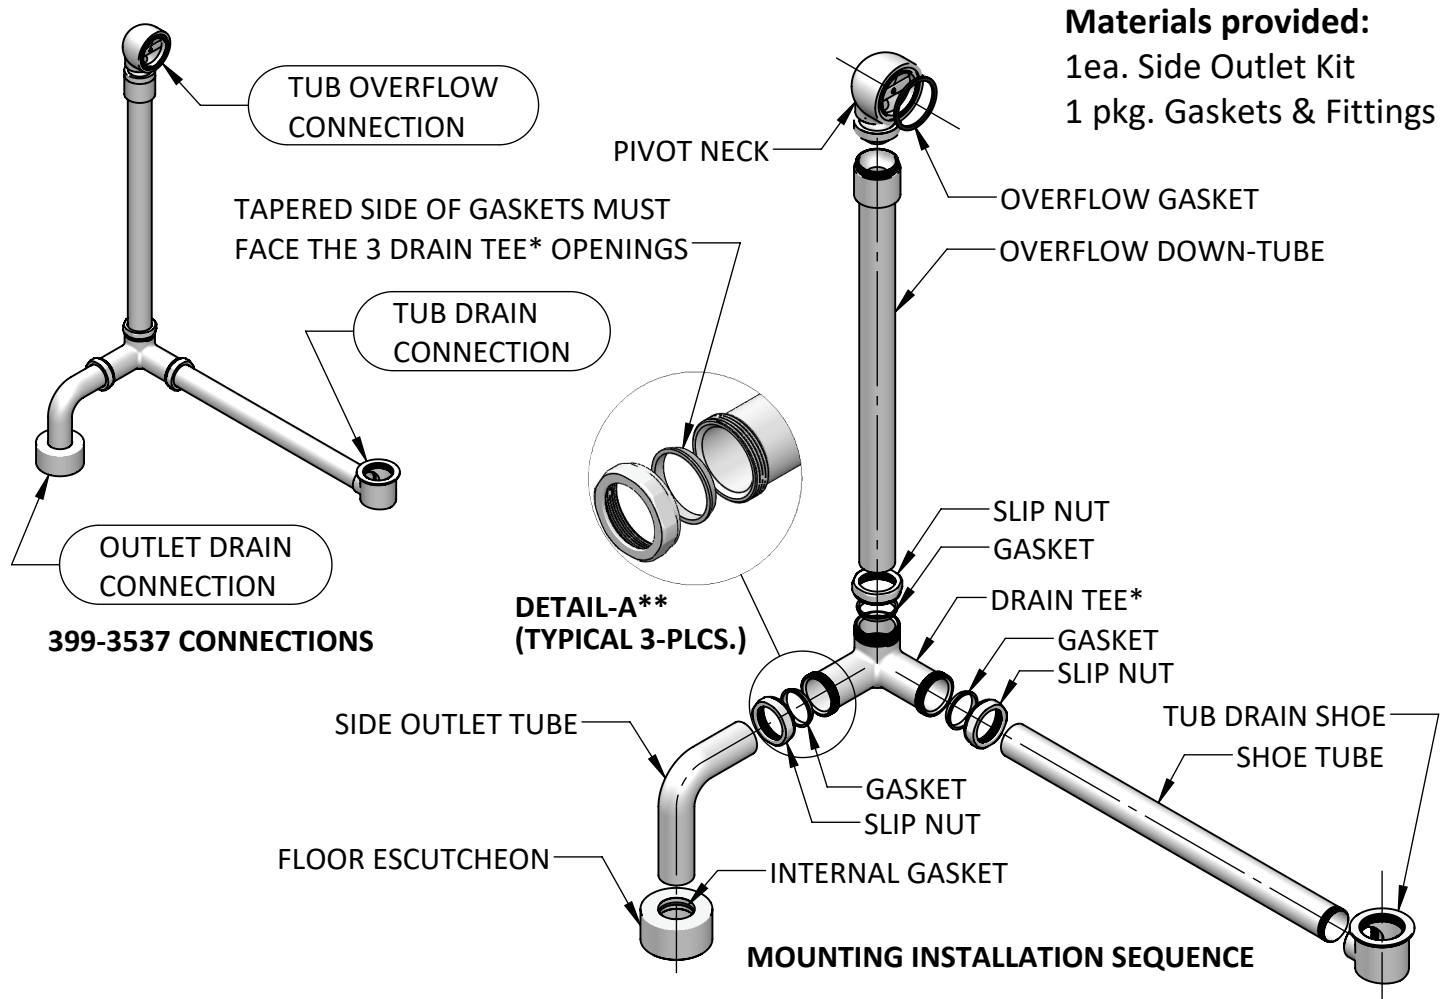

Typical Mounting Detail (Side Outlet Tub Waste with Pivot Neck #399-3537):

Note: Ensure the Trim Kit (ordered separately) is available during the installation, as it is required for fitment.

- Step-1:** Reference the **Mounting Installation Sequence** illustration shown above for correct placement and alignment of the components.
- Step-2:** Verify / test fit all the components prior to final installation. If required, carefully measure and cut the tubes to the desired length. Using the Trim Kit components (ordered separately), temporarily affix the Strainer and Overflow trim to hold your connections. Align the Side Outlet Tube with waste connection.
- Step-3:** Ensure all 3 drain Tube ends fit well into the Drain Tee* prior to tightening the 3 Slip Nuts. Verify the Gaskets are oriented correctly to make a proper seal with the Tubes and Drain Tee (see Detail-A**).
- Step-4:** Using appropriate sealant, attach all threaded fittings (as shown above) to complete the installation.
- Step-5:** Finish the installation by tightening the Trim Kit Strainer and Overflow components (use the gaskets that are supplied with the Trim Kit).
- Step-6:** Fill the tub, check all connections for leakage, and adjust / tighten the fittings as necessary.

To learn more about JACLO's warranty, please visit [**jaclo.com**](http://jaclo.com)