


INSTALLATION INSTRUCTIONS

Ceiling Support Rod

Part #'s: 4012-, 4018-, 4024-, 4030-, 4036-

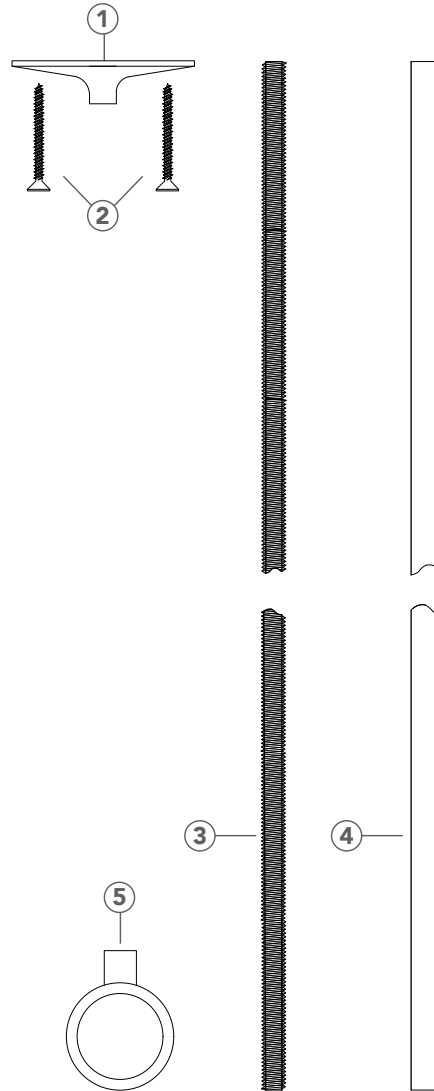

COMPONENTS

1. FLANGE (1)
2. SCREWS (2)
3. THREADED ROD (1)
4. COVER TUBE (1)
5. LOOP (1)

INSTALLATION

1. Determine location and ensure screws will be secured by wood beam or use fasteners (not included).
2. Temporarily hold rod in place and determine actual length needed.
3. Mark holes at flange to ceiling.
4. Disassemble rod and place all items in a clean, secure location.
5. Cut threaded rod to desired length (3/4" longer than cover tube).
6. Cut cover tube to desired length.
7. Slide loop over curtain rod or round shower arm.
8. Screw threaded rod into loop (Note: there is NO stop in loop or flange).
9. Slide cover tube over threaded rod, affix flange.
10. Screw flange to ceiling.

To learn more about JACLO's warranty, please visit **jaclo.com**