
# **INSTALLATION INSTRUCTIONS**

Cubix® Wall Mounted Accessories
Part #'s: 4279, 4280, 4277, 4218, 4224

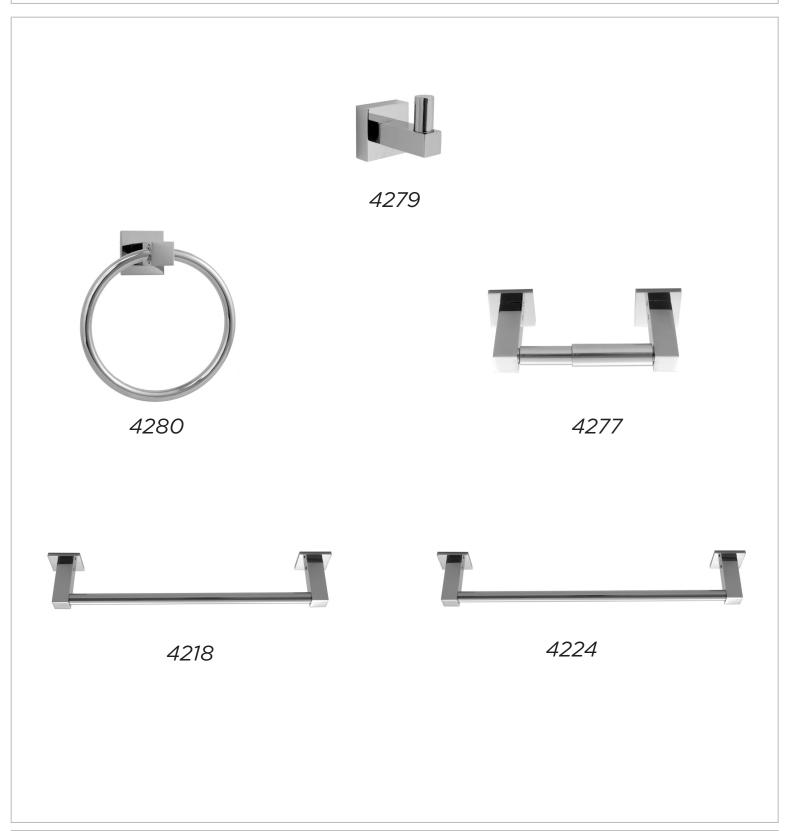





## **Robe Hook Installation (4279)**

5/8"


- 1. Determine location.
- 2. Drill 5/8" hole.
- 3. Make sure the larger hole faces front on escutcheon
- 4. Insert screw through escutcheon, attach molly bolt.
- 5. Place through hole and tighten, ensuring level, and fastening hole on bottom.
- 6. Place holder into escutcheon and tighten set screw.

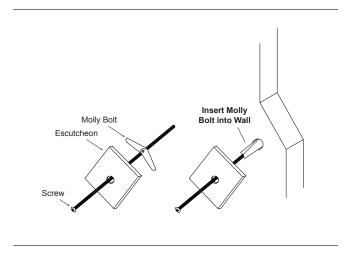


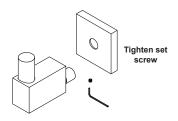

### **Towel Ring Installation (4280)**


- 1. Determine location
- 2. Drill 5/8" hole
- 3. Determine front & back of escutcheon.
- 4. Insert screw through mounting stem and escutcheon then attach molly bolt.
- 5. Place through hole and tighten, ensuring level
- 6. Attach accessory piece and tighten onto mounting stem with set screws furnished set screw should be on bottom.

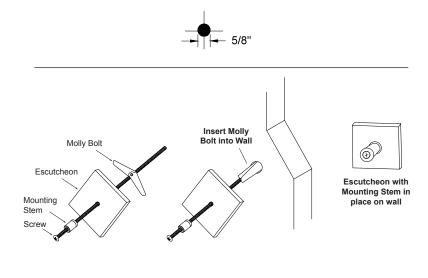


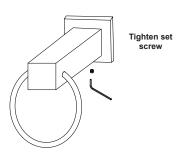



### **Toilet Paper Holder Installation (4277)**

- 1. Determine location, measure center to center distance.
- 2. Drill 5/8" holes
- 3. Determine front & back of escutcheon.
- 4. Insert screw through mounting stem and attach molly bolt.
- 5. Place through hole and tighten, ensuring level.
- 6. Attach accessory piece and tighten onto mounting stem with set screws furnished set screw should be on bottom.



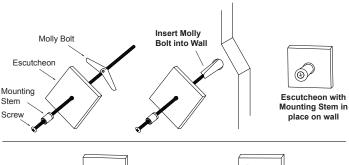

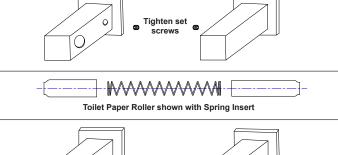




#### Towel Bar Installation (4218/4224)

- 1. Determine location, measure center to center distance.
- 2. Drill 5/8" holes
- 3. Determine front & back of escutcheon.
- 4. Insert screw through mounting stem and attach molly bolt.
- 5. Place through hole and tighten, ensuring level.
- Attach accessory piece and tighten onto mounting stem with set screws furnished set screw should be on bottom.

\*\*NOTE: Towel Bar can be cut in field if needed, cutting will void warranty\*\*

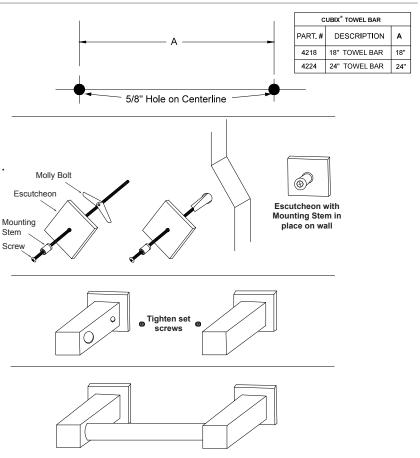

REVISED 9.14.201

