

INSTALLATION INSTRUCTIONS

Contempo I Wall Mounted Accessories

Part #'s: 4880-RH, 4880-SD, 4880-TH, 4880-TP, 4880-TB-18, 4880-TB-24



4880-RH



4880-SD



4880-TH




4880-TP



4880-TB-18




4880-TB-24

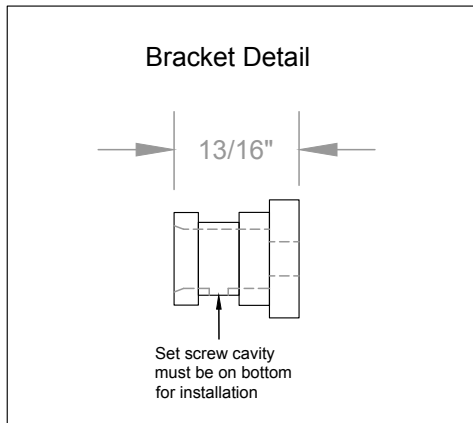

COMPONENT PARTS		QTY.
1	Plastic Wall Anchor	1
2	Wall	
3	Mounting Bracket	1
4	Screw	1
5	Set Screw	1
6	Hex Wrench (NOT INCLUDED)	1
7	Contempo I Accessory	1

****Quantity listed is for Single Hole Accessories****

****3/32" Allen Key Required, NOT SUPPLIED****

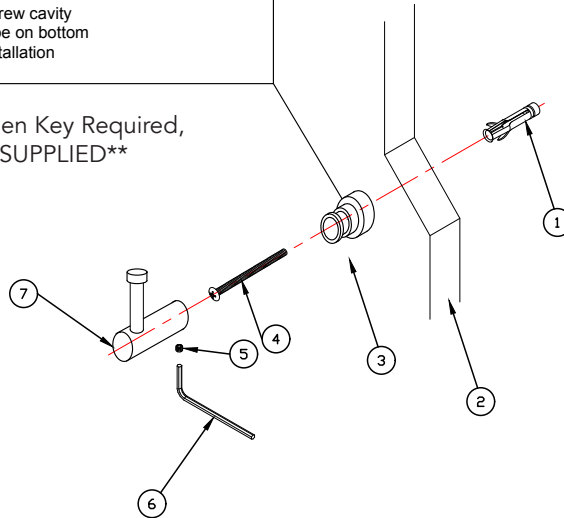

Single Hole Accesories Installation (4880-RH, 4880-SD, 4880-TH, 4880-TP)

1. Determine desired location of accessory.
2. Remove mounting bracket from accessory using 3/32" allen wrench (Not supplied). Place set screw in secure location.
3. Drill 1/4" hole and insert plastic anchors in wall.
4. Insert screw through mounting base and HAND tighten, ensuring set screw cavity is on bottom.
5. Place accessory over mounting base and secure with set screw. Correct install will have set screw flush with accessory.

Double Hole Accessories Installation (4880-TB-18, 4880-TB-24)

1. Determine desired location of accessory.
2. Using level and pencil, draw level line length of towel bar.
3. Measure center to center of holes in mounting bracket while mounting brackets are in place. And mark location on wall.
4. Drill 1/4" hole and insert plastic anchors in wall.
5. Remove mounting brackets from accessory using 3/32" allen wrench (Not supplied). Place set screws in secure location.
6. Insert screws through mounting brackets and HAND tighten, ensuring set screw cavities are level and on bottom.
7. Place accessory over mounting bases and secure with set screws. Correct install will have set screws flush with accessory.

To learn more about JACLO's warranty, please visit [**jaclo.com**](http://jaclo.com)