

# INSTALLATION INSTRUCTIONS


## Cubix II Pivoting Toilet Paper Holder

Part #5401-TPIV

**JACLO**  
Confidence from start to finish.™

### Materials provided:

- 1ea. Cubix II Accessory
- 1 Pkg. Installation hardware
- 1 ea. Hex Wrench

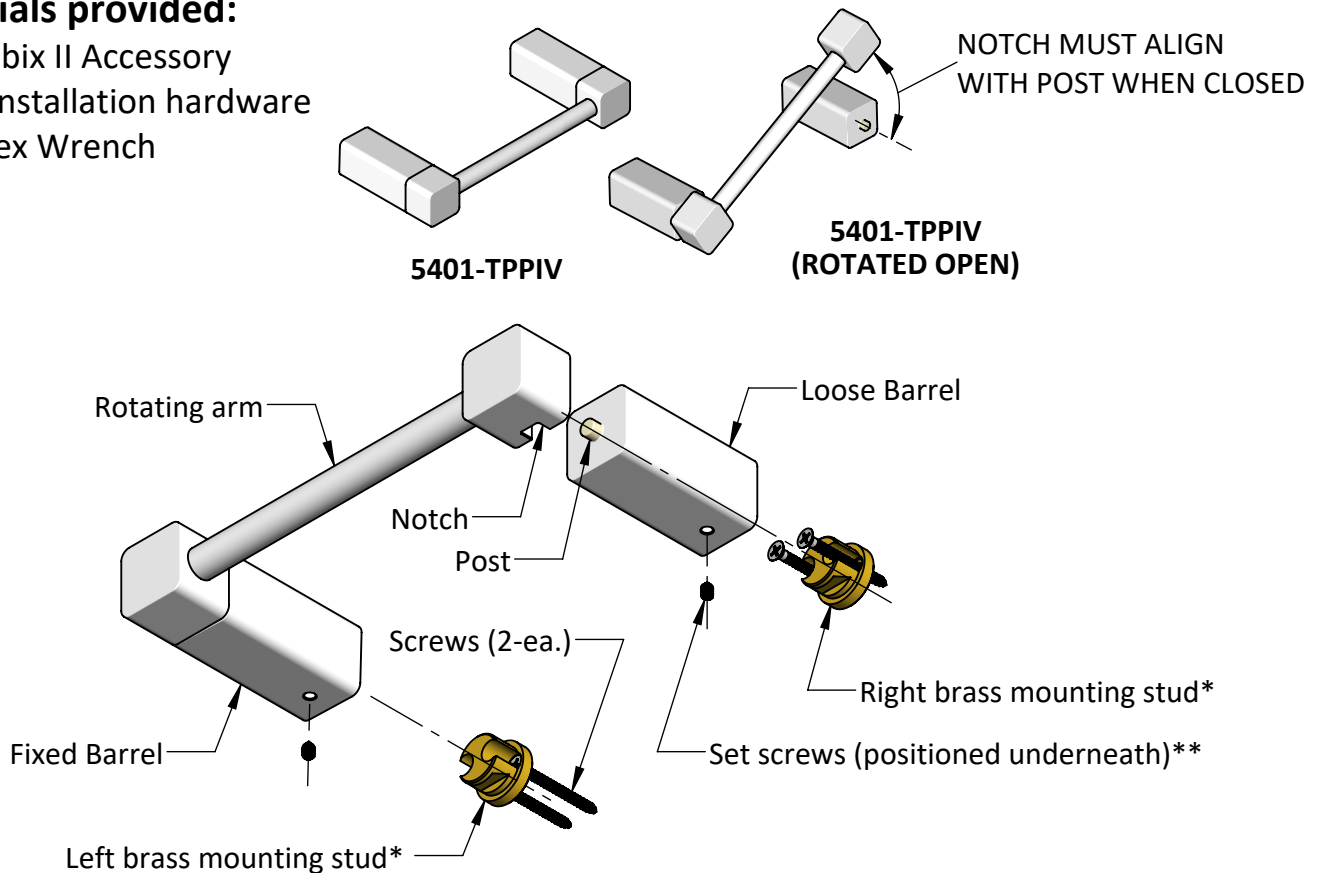

### Mounting Detail for 5401-TPIV

#### Two Post Installation:

**Important: JACLO recommends blocking for proper installation.**

**Step-1:** Determine desired location of accessory, and mark the two barrel locations.

Note: The barrels are 6 7/32" apart, center to center.

**Step-2:** Remove the brass studs using 3/32" allen wrench, and place the set screws in a secure location.

**Step-3:** Mark and drill two 1/4" holes (each stud), then insert the plastic anchors into the wall.

**Step-4:** Use the two mounting holes provided in each stud to install the screws into the anchors.

Note: The stud flats must be mounted in a horizontal position as noted in the illustration above\*

**Step-5:** Insert the set screws into the barrels, HAND tighten temporarily, ensuring the set screw cavities are positioned on the bottom as noted in the illustration above\*\*

**Step-6:** Slide the fixed barrel onto the left mounting stud and secure the set screw. Slide the loose barrel onto the right mounting stud and secure the set screw. A correct install will have the set screws tightened flush with the accessory. Test the rotating motion of the arm to verify it locks onto the post of the right-hand barrel.

To learn more about JACLO's warranty, please visit [\*\*jaclo.com\*\*](http://jaclo.com)