



# INSTALLATION INSTRUCTIONS

## SQUARE SHOWER DRAIN

Part #'s: 84266-, 6206-6-, 6207-6-, 6202-6-, 6209-6-  
6205-6-, 6201-6-

# JACLO®

Confidence from start to finish.™

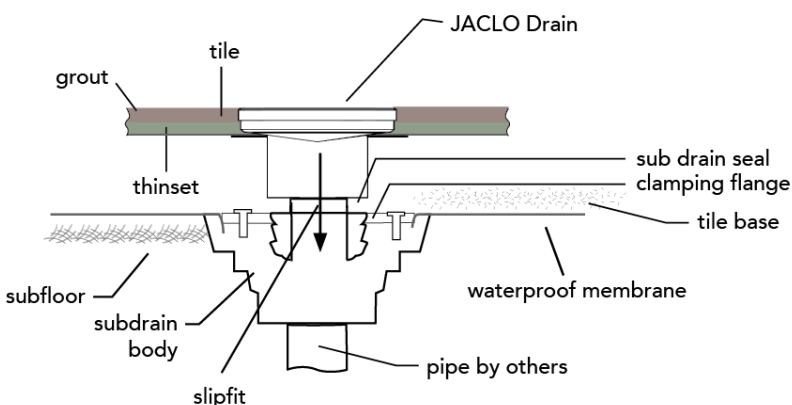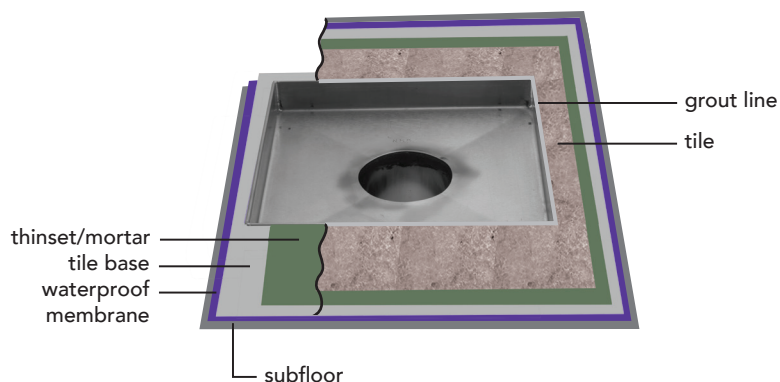


### SQUARE CHANNEL GRATES

6206-6




6207-6 / 6202-6 / 6209-6 / 6205-6 / 6201-6

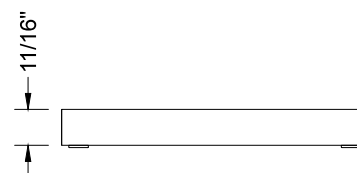

### SQUARE CHANNEL BODY

84266

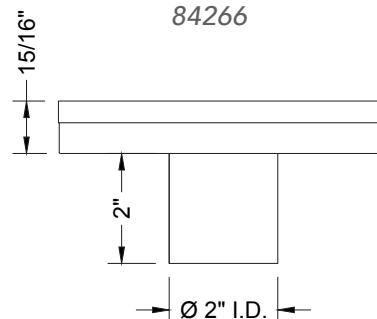

1. Determine installed location of drain, piping and subdrain
2. Install subdrain body with suitable support and connect outlet to pipe work. Note: Only JACLO subdrains are compatible. See catalog.
3. Install subfloor. There are many options at this juncture, follow local codes and subfloor manufacturers recommendations. Allow for correct slope, thin set and tile height
4. Install waterproof membrane. An approved membrane, such as (Chloraloy 240®) is required. Cut membrane to reveal drain bolt heads and outlet
5. Install clamping flange
6. Lubricate JACLO drain outlet with a liquid soap and press into subdrain seal to correct height and position
7. Install suitable tile base on top of the membrane mortar, tile base, etc. There are many options at this juncture, follow local codes and tile base manufacturers recommendations.
8. Allow for correct slope, thin set and tile height.
9. Tile height + thin set mortar height must equal 7/8". This is the fixed rim height above the tile flange. Adjust thin set amount to achieve this dimension.
10. Apply thinset mortar, tile leaving a space for the grout line
11. Apply grout
12. If using tile in grate, cut and shim tile to fit grate base and bond to grate base using suitable adhesive for 304 stainless steel
13. Install drain grate

To learn more about JACLO's warranty, please visit [\*\*jaclo.com\*\*](http://jaclo.com)