
INSTALLATION INSTRUCTIONS

JACLO zeroEDGE® and SLIM CHANNEL DRAINS

Part #'s: 88224, 88232, 88236, 88242, 88248, 88260 85224, 85232, 85236, 85242, 85248, 85260 83224, 83232, 83236, 83242, 83248, 83260



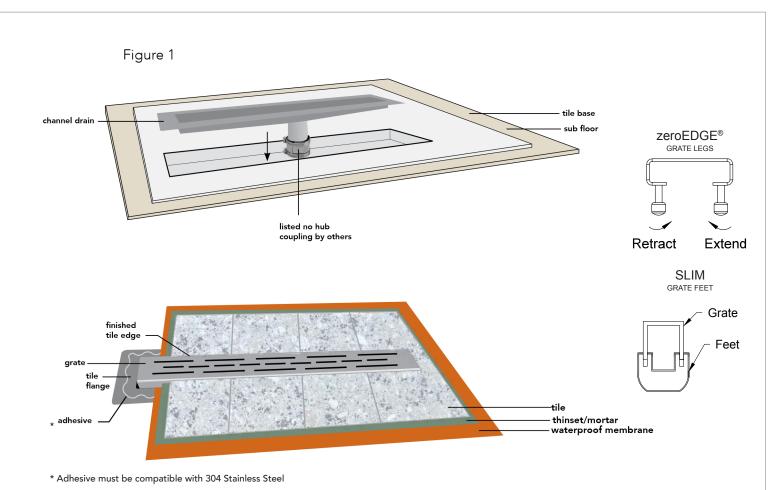


INSTALLATION


- 1. Determine location for channel drain
- 2. Install subfloor and base layer adhering to local codes
- 3. Cut hole in floor allowing additional 1/4". Allow access to fit and clamp no hub coupling. See Fig. 1
- 4. Install no hub coupling onto channel drain
- 5. Apply a bead of silicone caulking to the underside of tile flange
- 6. Install channel drain, by attaching no hub coupling to existing piping
- 7. ANSI A118.10 compliant membrane must be used for this installation. Cut membrane to match opening in channel drain base
- 8. Install waterproof membrane as per manufacturer's instructions. Adhere membrane to tile flange on channel drain using membrane manufacturer's recommended adhesive
- 9. Apply thin set mortar and install tile
- 10. Once above is completed and dry, install channel drain grate
- 11. Install grate in channel drain base. If required, adjust legs on grate level with tile profile. Legs extend clockwise rotation or retract counter clockwise rotation. Adjust all legs to base to distribute grate level evenly on base

REVISED 3.20.2018


882XX-BSS

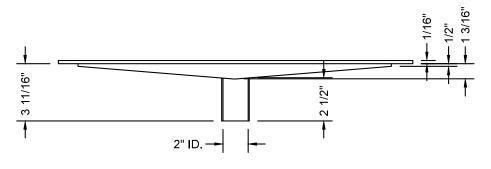

TILE HEIGHT ABOVE FLANGE (Grate Height)		
PART.#	Z Min.	Z Max.
88224-BSS	9/16"	1"
88232-BSS	9/16"	1"
88236-BSS	11/16"	1 1/8"
88242-BSS	9/16"	1"
88248-BSS	9/16"	1"
88260-BSS	5/8"	1 1/16"

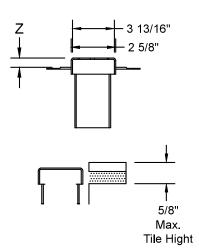

852XX-BSS

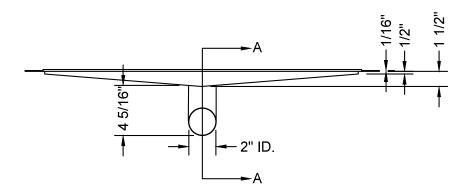

TILE HEIGHT ABOVE FLANGE (Grate Height)		
PART.#	Z Min.	Z Max.
85224-BSS	9/16"	1"
85232-BSS	9/16"	1"
85236-BSS	11/16"	1 1/8"
85242-BSS	9/16"	1"
85248-BSS	9/16"	1"
85260-BSS	5/8"	1 1/16"

DETAIL A

