

# INSTALLATION INSTRUCTIONS


## Westfield/Astor Tub Spout

Part #: 6270


**JACLO**  
Confidence from start to finish.®




BACK VIEW

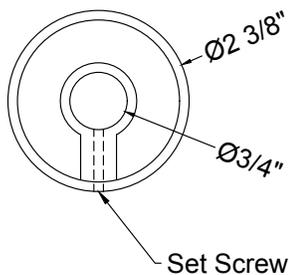

QUICK CONNECT

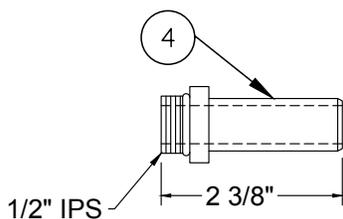

SIDE VIEW

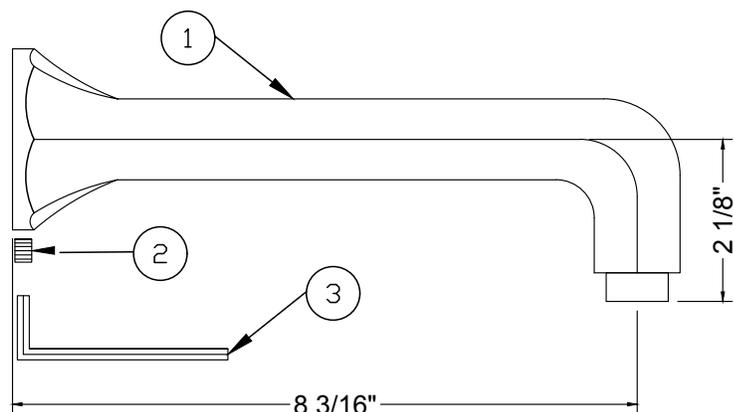

COMPONENT PARTS	
1	SPOUT
2	SET SCREW
3	ALLEN KEY
4	1/2" IPS QUICK CONNECT

## TUB SPOUT INSTALLATION

1. Prepare installation by having 1/2" female fitting recessed 1/4" from finished wall.
2. Loosen set screw (2) located in back of spout (1) and put in secure location.
3. Remove quick connect (4) by pulling straight out.
4. Affix quick connect (4) to female fitting in wall using appropriate method.
5. Apply sealant to rear of spout (1).
6. Slide tub spout (1) on to quick connect (4).
7. Tighten set screw (2).

To learn more about JACLO's warranty, please visit [\*\*jaclo.com\*\*](http://jaclo.com)