


INSTALLATION INSTRUCTIONS

9" CONTEMPO SLIM TUB SPOUT

Part #7230


JACLO
Confidence from start to finish.™

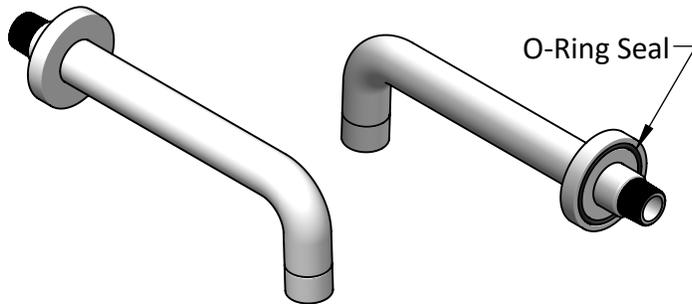


7230 TUB SPOUT

Materials provided:

- 1ea. Contempo Spout with Aerator
- 1ea. Contempo Escutcheon

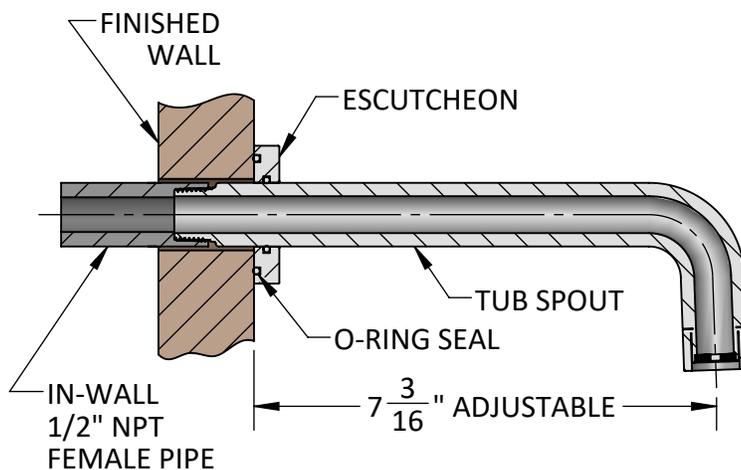

MOUNTING DETAIL

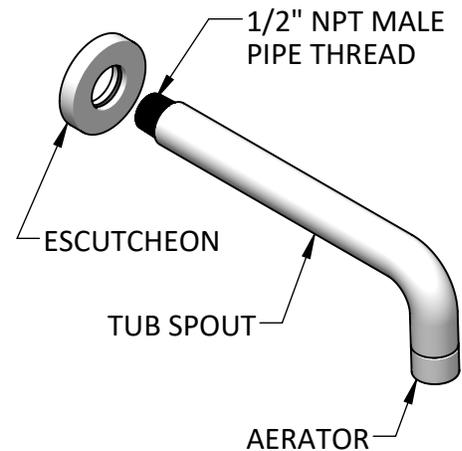

COMPONENTS

Typical Tub Spout Mounting Detail:

Spout Installation (#7230)

- Step-1:** Slide the Escutcheon away from the threaded end of the spout, and apply appropriate sealant to the threads prior to installing.
- Step-2:** Thread the Spout (male 1/2" NPT) into the existing in-wall pipe (female 1/2" NPT) until secure, and verify the Spout is oriented in the desired finished position.
- Step-3:** Slide the Escutcheon against the finished wall (ensure the O-Ring is tight against the wall surface).
- Step-4:** Remove the Aerator, flush hot and cold water for a few minutes, then carefully re-install the Aerator.

To learn more about JACLO's warranty, please visit [**jaclo.com**](http://jaclo.com)