


INSTALLATION INSTRUCTIONS

- Add a handshower to existing showerhead
- Replace showerhead with a handshower

Part #'s: 8015, 8023

JACLO®

Confidence from start to finish.*

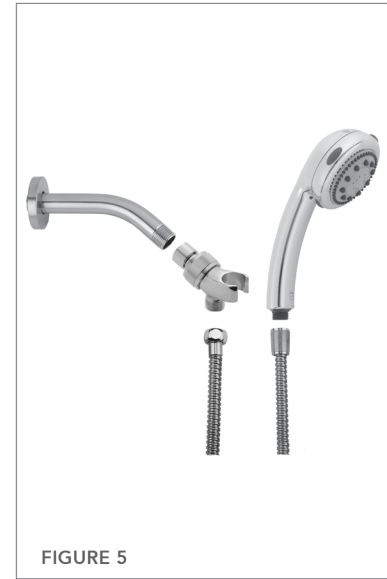

INSTALLATION

1. With an open end wrench or large adjustable pliers, remove old showerhead from existing showerarm. Be careful not to loosen other end of showerarm in wall. **Figure 1**
2. Remaining showerarm should look like this. If not, replace with JACLO showerarm or standard 1/2" pipe that has 1/2" threads at each end. **Figure 2**
3. Screw cone end of hose onto threaded hose attachment of handshower. Use washer provided. **Figure 3**
4. Next, screw showerarm mount onto end of showerarm. Use washer provided. **Figure 4**
5. Screw hexagonal nut end of hose onto threaded hose attachment of showerarm mount. Use washer provided. **Figure 4**
6. From the top, Slide handshower into shwerarm mount. Note: This mount is not a clip. Do not push handshower into mount-it will break. **Figure 5**

To learn more about JACLO's warranty, please visit [**jaclo.com**](http://jaclo.com)