


# INSTALLATION INSTRUCTIONS

All Brass Swan Neck Showerarm  
Part #'s: 8070-

**JACLO**<sup>®</sup>  
Confidence from start to finish.™

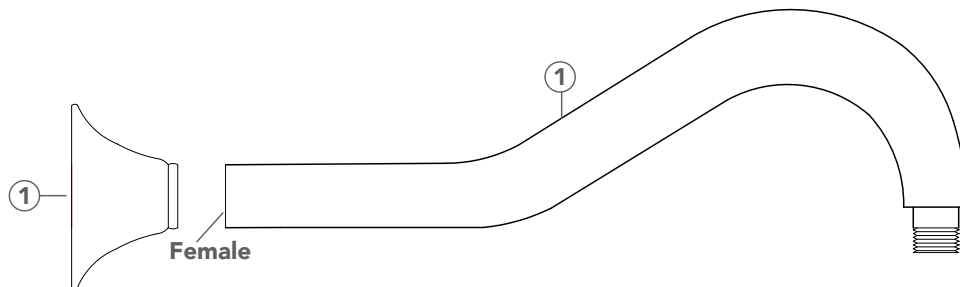

## COMPONENTS

1. ARM (1)
2. ESCUTCHEON (1)

## INSTALLATION

1. Determine location.
2. Nipple should protrude 1/2" from finished wall.
3. Slide escutcheon over arm.
4. Using appropriate sealant, secure arm to connection in wall.

To learn more about JACLO's warranty, please visit [\*\*jaclo.com\*\*](http://jaclo.com)