



# INSTALLATION INSTRUCTIONS

## Roaring 20's Tub Spout

Part #: 9230

# JACLO®

Confidence from start to finish.™

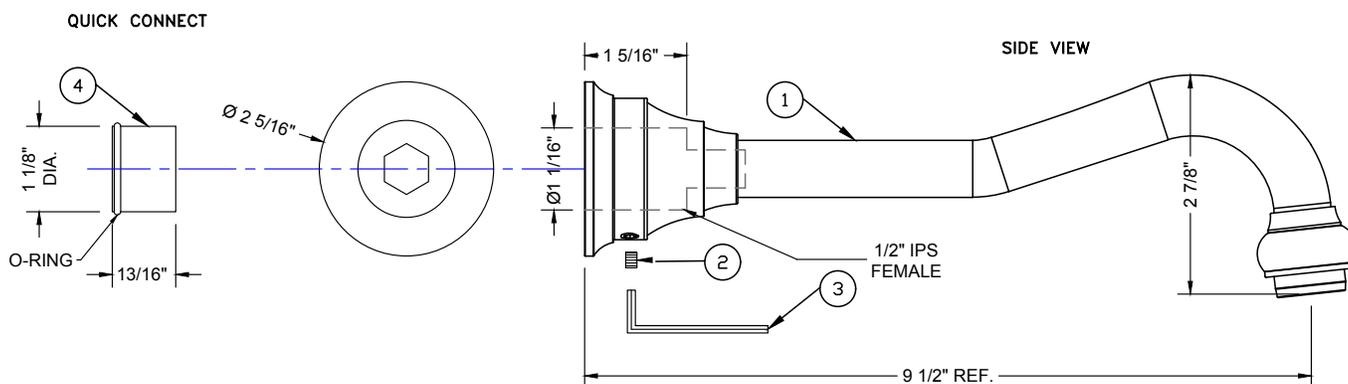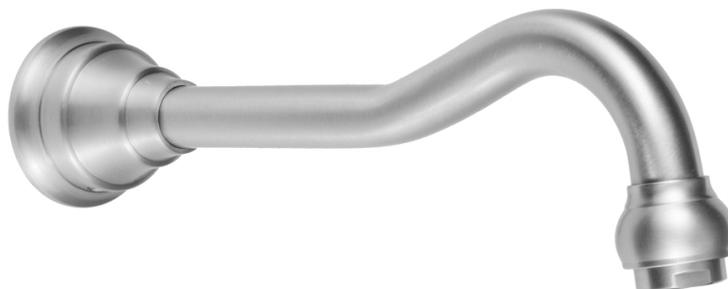

COMPONENT PARTS	
1	SPOUT
2	SET SCREWS (2)
3	ALLEN KEY
4	1/2" IPS QUICK CONNECT

## TUB SPOUT INSTALLATION

1. Prepare installation by having IPS threads extending 3/4" from finished wall.
2. Loosen set screws (2) located in back of spout (1) and put in secure location.
3. Remove quick connect (4) by pulling straight out. (Tip: Loosely screw in 1/2" IPS nipple for easy removal)
4. Affix quick connect (4) to IPS using appropriate procedures (1/2" allen key is required).
5. Apply caulk to rear of spout (1).
6. Slide tub spout (1) on to quick connect (4).
7. Tighten set screws (2).

To learn more about JACLO's warranty, please visit [\*\*jaclo.com\*\*](http://jaclo.com)