

INSTALLATION INSTRUCTIONS

Roaring 20's Roman Tub Set
Part #: 9930-

JACLO®

Confidence from start to finish.®



HANDLE STYLES



T678



T676



T674



T675



T679




T692



T667

FIG. 1

| COMPONENT PARTS | | |
|-----------------|----|-------------------------------|
| TRIM | 1 | Aerator - Part of Spout |
| | 2 | Tube Spout - 9930-SPT-*** |
| | 3 | Set Screw - Part of Spout |
| | 4 | Lift Rod Cap - Part of Spout |
| | 5 | Handle (2) - Varies by Model |
| | 6 | Escutcheon (2) - 9830-HF-*** |
| ROUGH | 11 | Cold Valve - RTC-RGH |
| | 12 | Hot Valve - RTH-RGH |
| | 13 | Cartridge (2) (Pre-installed) |
| | 14 | Valve Body Nut (4) |
| | 15 | Fiber Washer (4) |
| | 16 | Quick Connect - 6940-QC-0 |
| | 17 | Steel Washer (2) |
| | 18 | Brass Nut |
| | 19 | Brass Tee - 300-34-0 |

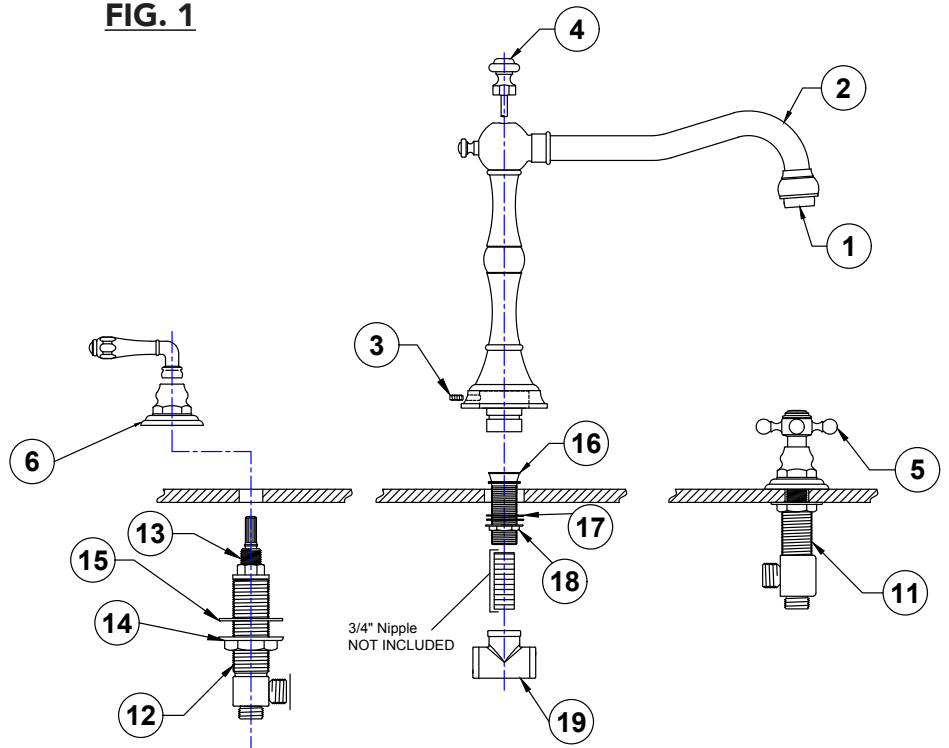

SPOUT QUICK CONNECT AND VALVE BODY ROUGH INSTALLATION

SPOUT

1. Spout Hole should be 1-1/4" to 1-3/8" max, Valve holes 1-1/4" to 1-3/8" max.
2. Remove nut (18) and washers (17) from spout, discard top washer as it is not used.
3. Drop quick connect (16) from top of counter; re-install brass nut (18) and washer (17) and tighten.
4. Install 3/4" "close" or "short" nipple (NOT SUPPLIED) to inside of quick connect (16) using suitable pipe sealant.
5. Install Tee (19) with suitable pipe sealant.

****NOTE**** WHEN USING THE J-6910-DIV-RGH, TEE (19) IS NOT USED, A 3/4" NIPPLE IS STILL NEEDED (NOT SUPPLIED) FOR CONNECTION FROM DIVERTER TO QUICK CONNECT. (3/4" COUPLING CAN BE ATTACHED TO NIPPLE, IF PREFERRED)


VALVES

6. Remove upper body nut (14) and fiber washer (15).
7. Install Valve assemblies from under deck and replace top nut (14) and washer (15). Refer to **Figure 4** for various handle/stem length.
8. Connect side outlet of hot and cold valve to Tee (19) by hose, or piping.

INSTALLATION FOR DIVERTER & HANDSHOWER IF USED


| COMPONENT PARTS | | |
|-----------------|----|---------------------------------------|
| DIV-TRIM | 5 | Handle - <i>Varies by Model</i> |
| | 6 | Escutcheon - 9830-HF-*** |
| | 7 | Handshower Base - 8029/8030 |
| | 8 | Sleeve for Deck Mount - 8019 |
| | 9 | Handheld - (<i>Sold Separately</i>) |
| | 10 | Hose - 3060-DS |
| DIV-RGH | 20 | Diverter Valve - J-1209 |
| | 21 | Brass Nut (2) |
| | 22 | Brass 1/2" Coupling - D16303-12 |
| | 23 | Double Check Valve - 7010-BF |
| | 24 | High Pressure Hose - 3024-HP |

FIG. 2

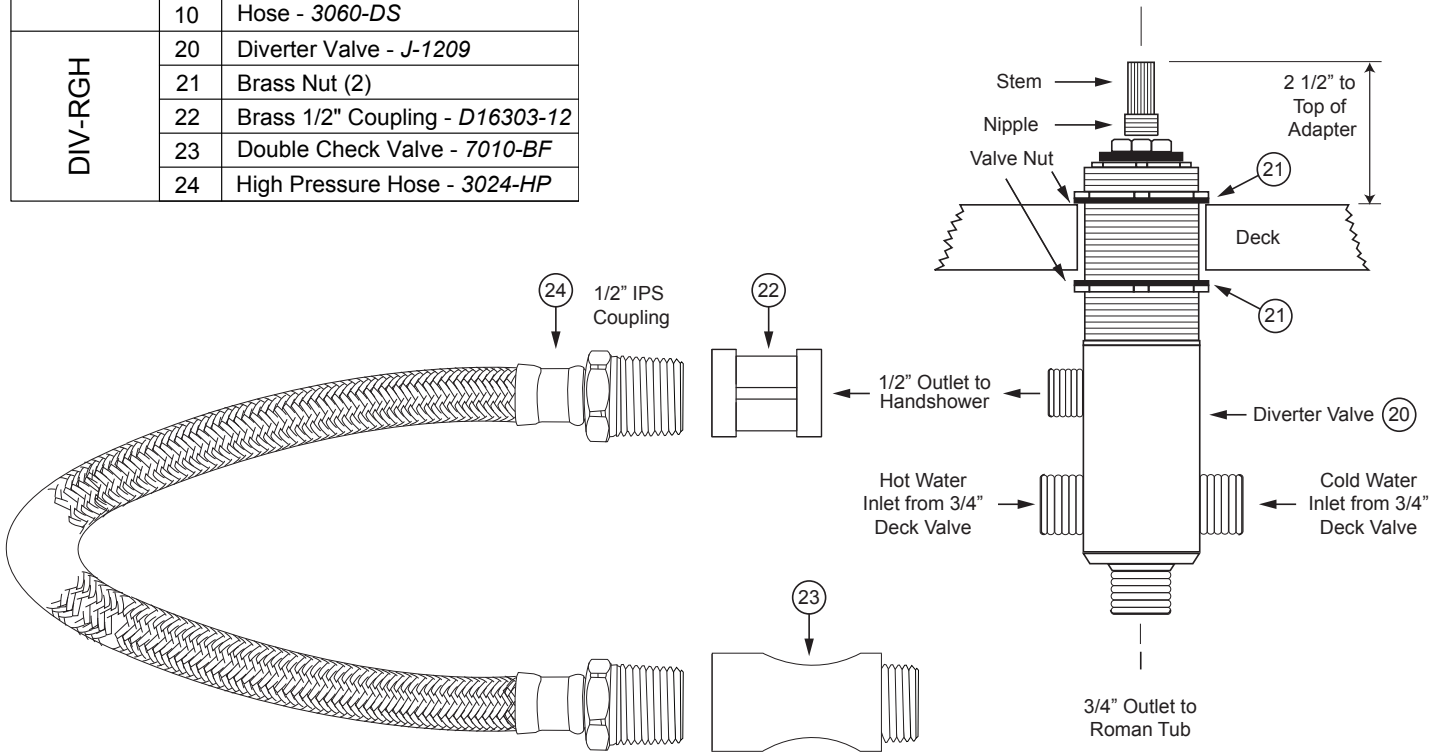

FOR ILLUSTRATION PURPOSES ONLY (STYLES VARY)

FIG. 3

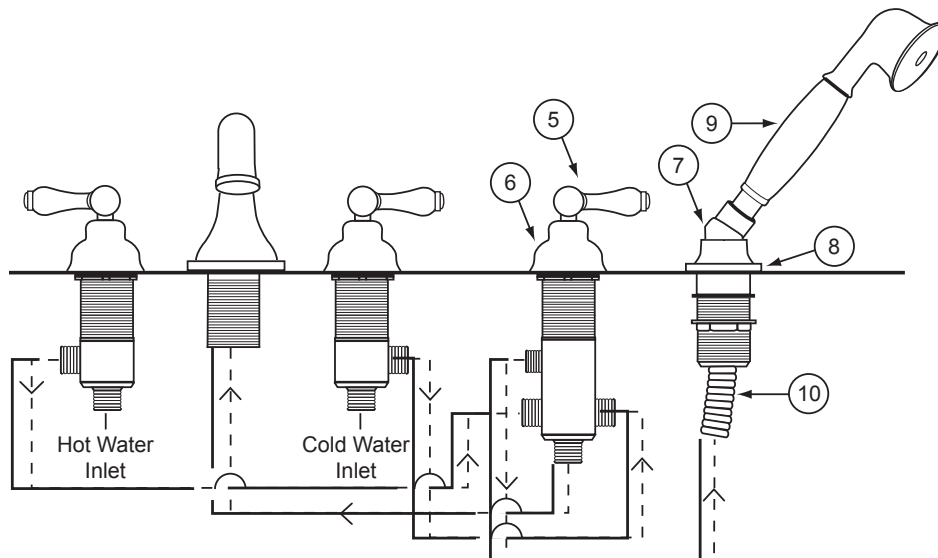

INSTALLATION FOR DIVERTER & HANDSHOWER IF USED (CONTINUED)

1. Drill 1-1/2" hole in desired location for diverter. Maximum deck thickness is 2-1/4" for diverter only. Roman tub spouts and valves may differ and must be checked.
 2. Remove top valve nut **(21)** from valve.
 3. Thread bottom valve nut **(21)** all the way down diverter valve **(20)**.
 4. Slide valve (from underneath) through deck and install top valve nut.
 5. Secure 1/2" coupling **(22)** to outlet on valve (as indicated)
 6. Secure high pressure hose **(24)** to 1/2" coupling.
 7. Connect double check valve **(23)** to high pressure hose.
 8. Connect Hot and Cold water supplies to diverter valve as shown.
- ** MAKE SURE ANY SOLDER CONNECTIONS ARE AT LEAST 1-1/2" AWAY FROM VALVE BODY****
9. Connect bottom of diverter valve to spout quick connect **(16)**.

TRIM INSTALLATION

SPOUT

1. Place spout on top of quick connect **(16)**, loosen set screw **(3)** and place spout **(2)** on quick connect and push until it clicks into place and tighten set screw **(3)**.

HANDLES

2. Install as per **Figure 4**, various handles have different stem measurements.

DIVERTER HANDLE

3. Install as per **Figure 4**, various handles have different stem measurements.

HANDSHOWER & HOSE (Figure 3)

4. Install sleeve for deck mount **(8)** by drilling 1-1/4" hole in deck. Remove bottom brass nut and metal washer, drop in mount from above deck (rubber washer between mount and deck) and secure with washer and nut.
5. Attach nut end of hose **(10)** to double check valve **(23)**. *ENSURE WASHERS ARE IN PLACE*
6. Put hose through deck mount **(8)** and attach handshower base **(7)**.
7. Attach handshower to handshower base **(7)**.

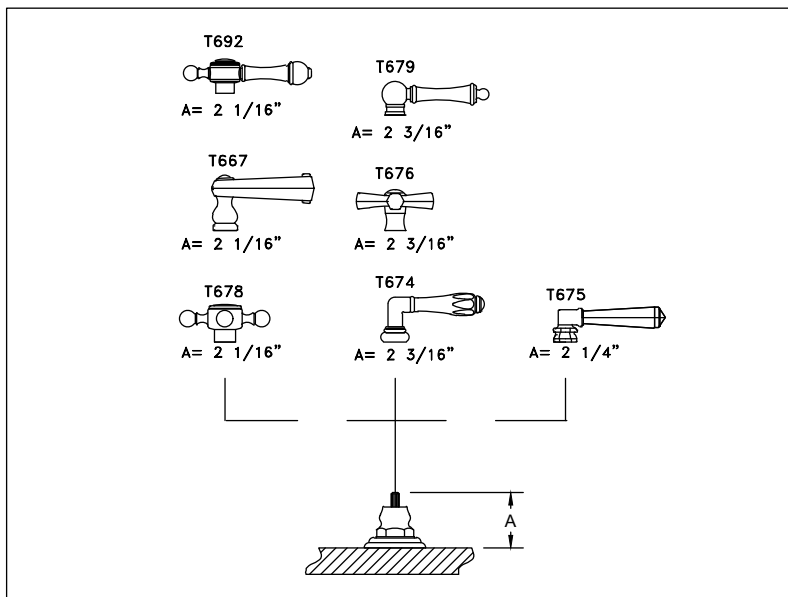


FIG. 4

To learn more about JACLO's warranty, please visit [**jaclo.com**](http://jaclo.com)