

INSTALLATION INSTRUCTIONS

Bidet Spray Kits with On-Off Water Supply

Part #B039-646, B042-646, B043-646, B071-646, B074-646



IMPORTANT: SEE PAGE #2 FOR THE CORRECT USE OF THESE BIDET SPRAYS

JACLO
Confidence from start to finish.™

Materials provided:


Bidet Spray Kit

1 Pkg. Installation hardware

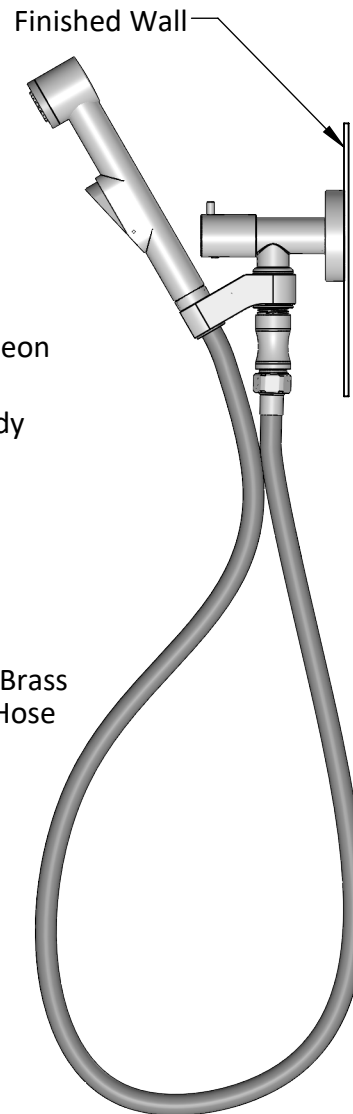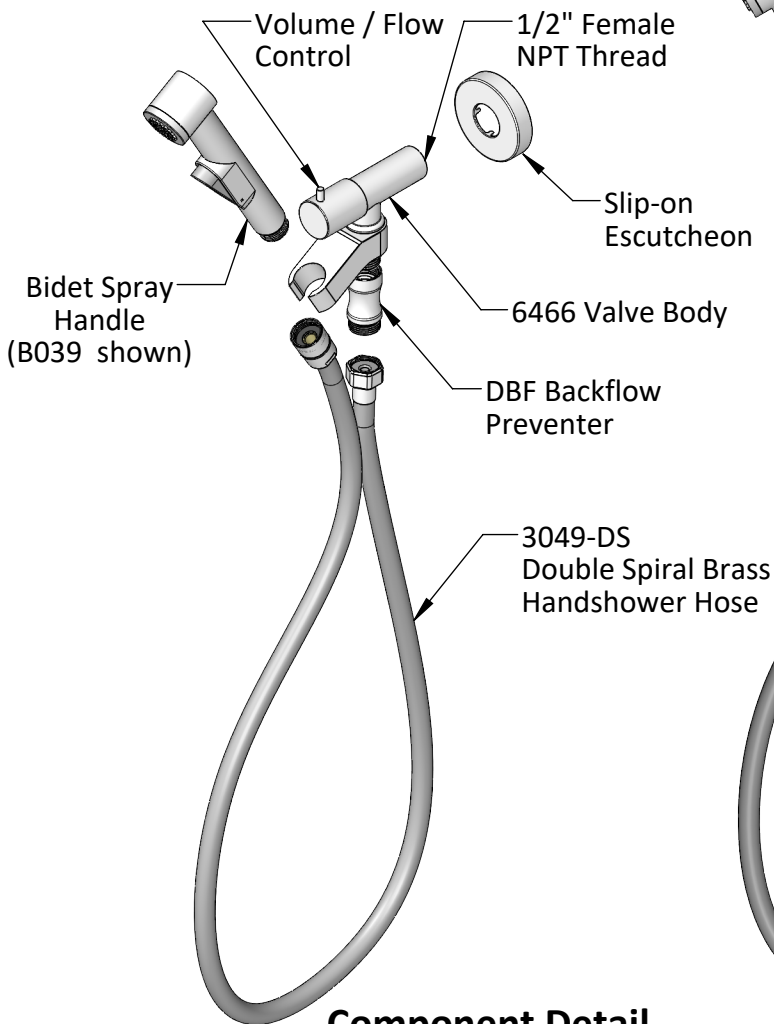

Recommended tools:
Thread sealant
Strapwrench

5/16" - 1/2"
Protrusion
Required

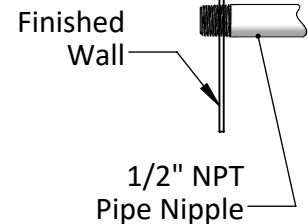

Note: These kits are equipped with a built-in positive shut-off valve. Any of JACLO's pressure balance valves or JACLO's 1/2" thermostatic valves with built-in volume controls can be used as the primary positive shut-off and mixing valve for temperature control.

Step 1: Install a 1/2" NPT pipe nipple as shown in the diagram above.

Step 2: Run water through system to flush out dirt and debris.

Step 3: Use appropriate sealant when threading fixture onto pipe nipple

Step 4: Connect the hose to the body and to the handshower; hang up handshower.

Step 5: Pressurize the unit and check to ensure no leaks are present while under pressure and while the handshower is in use.

To learn more about JACLO's warranty, please visit [**jaclo.com**](http://jaclo.com)