


# INSTALLATION INSTRUCTIONS

## Economy All Brass Curved Curtain Rod

Part #: 6979-

# JACLO®

Confidence from start to finish.™

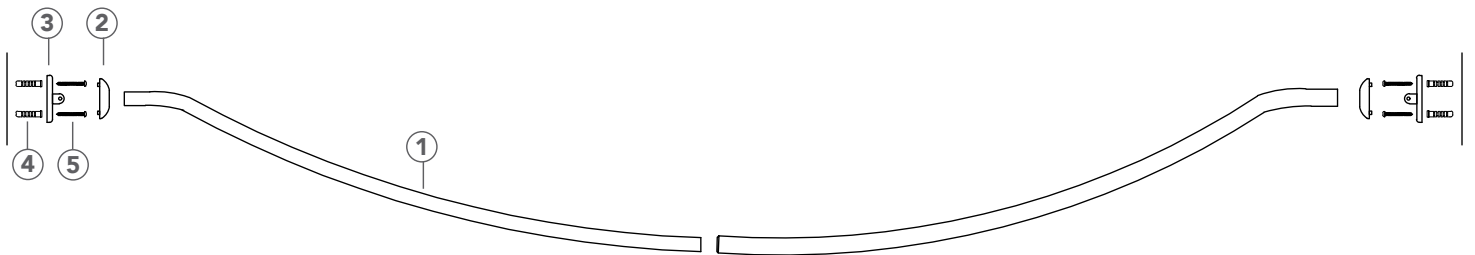

### COMPONENTS

1. CURTAIN ROD (2)
2. FLANGE (2 DIFFERENT SIZES, LEFT & RIGHT) (2)
3. FLANGE MOUNTING PLATE (2)
4. PLASTIC MOLLY (4)
5. SCREWS (4)
6. NUTS AND BOLTS FOR SECURING ROD TO FLANGE

### INSTALLATION

1. Determine location of curtain rod.
2. Place two ends of rod (1) together (this is adjustable as one end slides into the other).
3. Separate flange cover (2) from flange mounting plates (3).
4. Slide flange covers (2) onto rod (1).
5. Mount flange mounting plates (3) to wall.
6. Attach rod (1) to mounting plates (3) with nuts and bolts (6)
7. Slide flange onto flange mounting plate and twist into place.

To learn more about JACLO's warranty, please visit [\*\*jaclo.com\*\*](http://jaclo.com)