

INSTALLATION INSTRUCTIONS


T521-TRIM

Part # T521-TRIM

JACLO
Confidence from start to finish.™

Materials provided:

1ea. Parts Shown Below
1 pkg. Installation Hardware

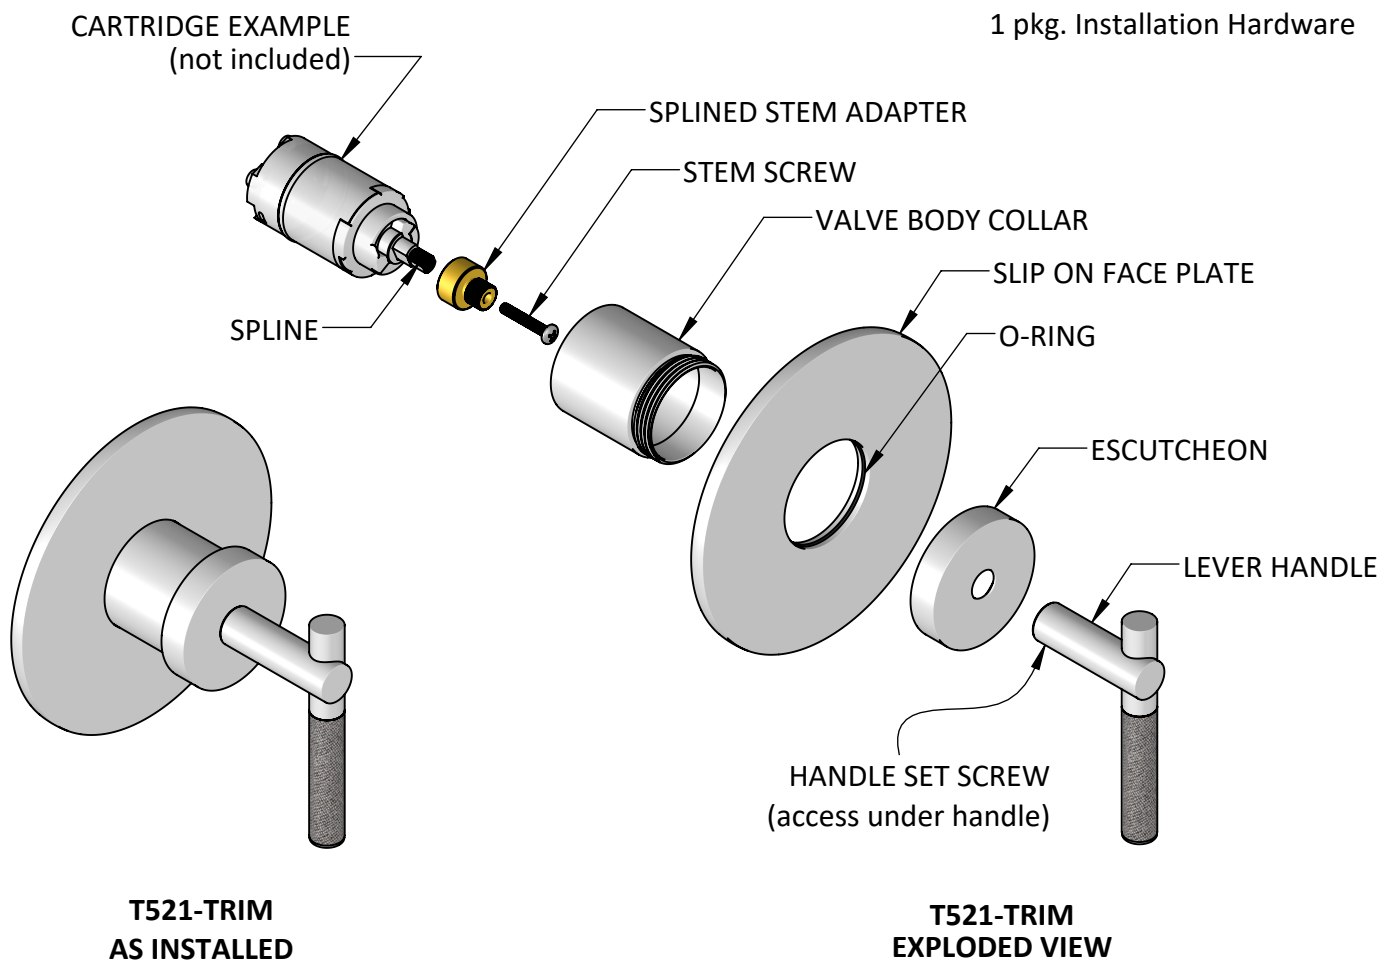

Typical Trim Mounting Detail:

- Step-1:** Verify the in-wall valve and cartridge have been installed correctly.
- Step-2:** Push on the **Splined Stem Adapter** and secure with the **Stem Screw**.
- Step-3:** Thread on the **Valve Body Collar** until snug.
- Step-4:** Slide the **Slip On Face Plate** over the **Valve Body Collar** until flush against the wall.
- Step-5:** Thread on the **Escutcheon** until snug.
- Step-6:** Determine the appropriate angle for the **Lever Handle**, loosen the **Handle Set Screw** and push the **Handle** on until securely seated.
- Step-7:** Once the **Lever Handle** is positioned correctly, tighten the **Handle Set Screw**.
- Step-8:** Upon completion, test the valve to verify functionality.