

INSTALLATION INSTRUCTIONS

Contempo Wall Faucet & Tub Filler Extension

Part #5550-EXT



Materials provided:

- 2 Valve Extensions
- 2 Extension Sleeves


Required (not included):

P/N #5550-RGH Rough Valve




Recommended tools:

- 17mm Open End Wrench
- O-Ring Lubricant

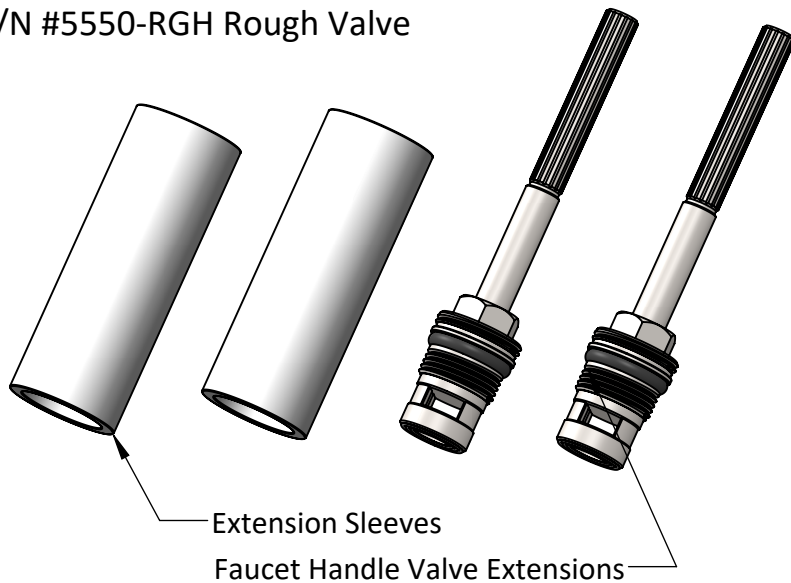

Component Detail

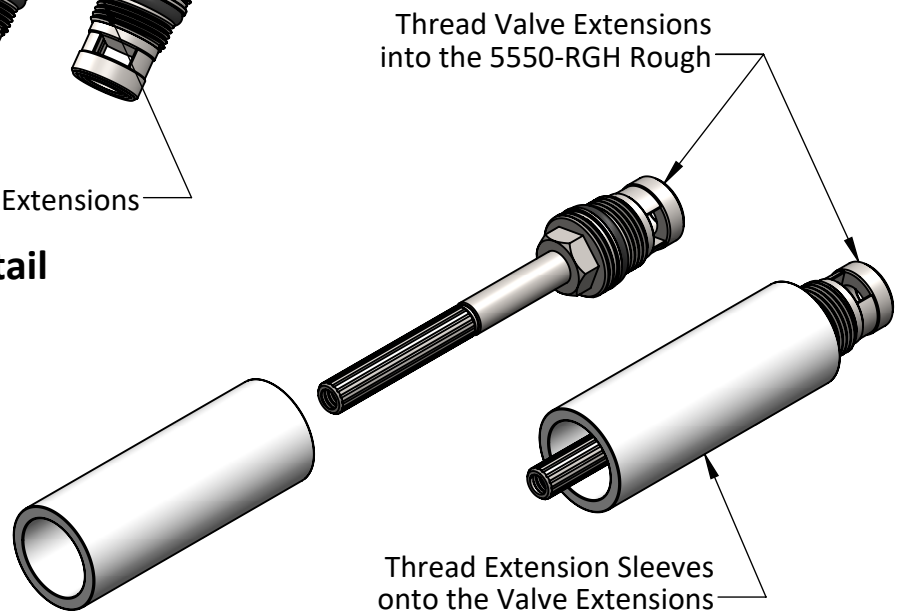

Installation

Step 1: Apply suitable lubricant to the Faucet Handle Valve Extension O-rings.

Step 2: Then thread the Faucet Handle Valve Extensions (Hot and Cold) onto the 5550-EXT Rough, and tighten securely using a 17mm wrench.

Step 3: Thread the Extension Sleeves onto the Valve Extensions, and hand tighten.

To learn more about JACLO's warranty, please visit [**jaclo.com**](http://jaclo.com)