INSTALLATION INSTRUCTIONS

Extension for Cycling Valve Part #: J-DIV-CSV-EXT-C, J-DIV-CSV-EXT-T






J-DIV-CSV-EXT-C-



J-DIV-CSV-EXT-T-

CREATED 2.21.2019

PARTS

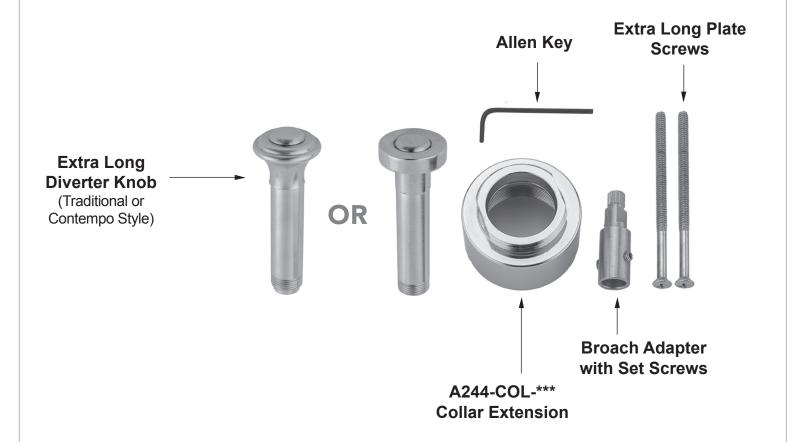


PREPARATION

- 1. Remove Decorative Handle (5) & Trim Plate (10)
- 2. Remove Decorative Cap (4) if present

NOTE: NOT ALL CSV'S HAVE A CAP THAT GOES OVER COLLAR

INSTALLATION

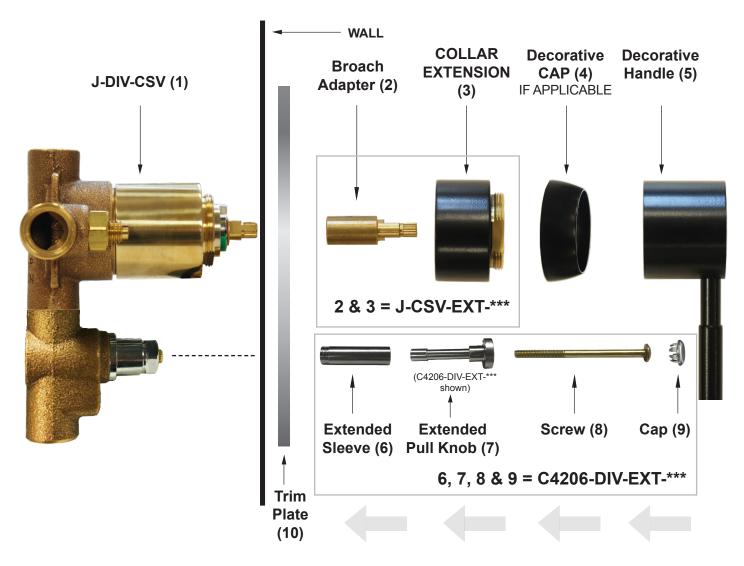

PICTURE FOR REFERENCE ONLY

- 1. Attach Broach Adapter (2) to J-DIV-CSV stem. Tighten set screws on Broach Adapter.
- 2. Thread on Collar Extension (3) to existing collar on valve.
- 3. Replace Decorative Cap (4), (if needed)
- 4. Attach Existing Decorative Handle (5) by tightening set screw in handle to Broach Adapter (2)
- 5. Thread Extended Sleeve (6) to lower portion of valve
- 6. Install Extended Pull Knob (7) through Extended Sleeve (6) to broach
- 7. Push Screw (8) through Extend Pull Knob (7) & hand tighten
- 8. Attach Cap (9) to extended Pull Knob (7)

