
Concealed Box Rough for FST

Part #9990-FST-BOX-RGH



Materials provided:

Concealed Box Body
Installation Hardware (shown below)

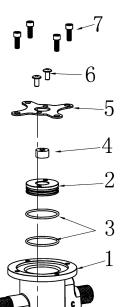


12	Washer	4	SUS
11	Washer	4	SUS
10	Screws	4	SUS
9	4MM Hex Wrench	1	SUS
8	Expansion Screws	4	SUS
7	Screws	4	SUS
6	Screws	2	SUS
5	Stainless Steel Plate	1	SUS
4	Air Bubble Level	1	ABS
3	0-ring	2	NBR
2	Plug	1	ABS
1	Brass Concealed Box Body	1	Brass
NO.	Name of Component	QTY	Material




Recommended tools:

Adjustable Wrench Phillips Screwdriver Plumbers Putty Pipe Tape Pliers

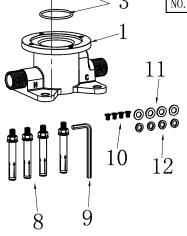

Box Body Details & Hardware B.O.M.

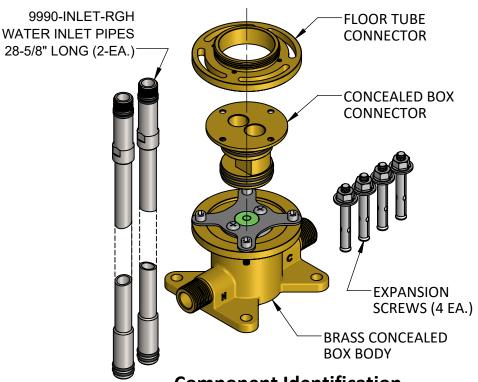


Component Identification (parts shown are included in kit)

Concealed Box Rough for FST

Part #9990-FST-BOX-RGH



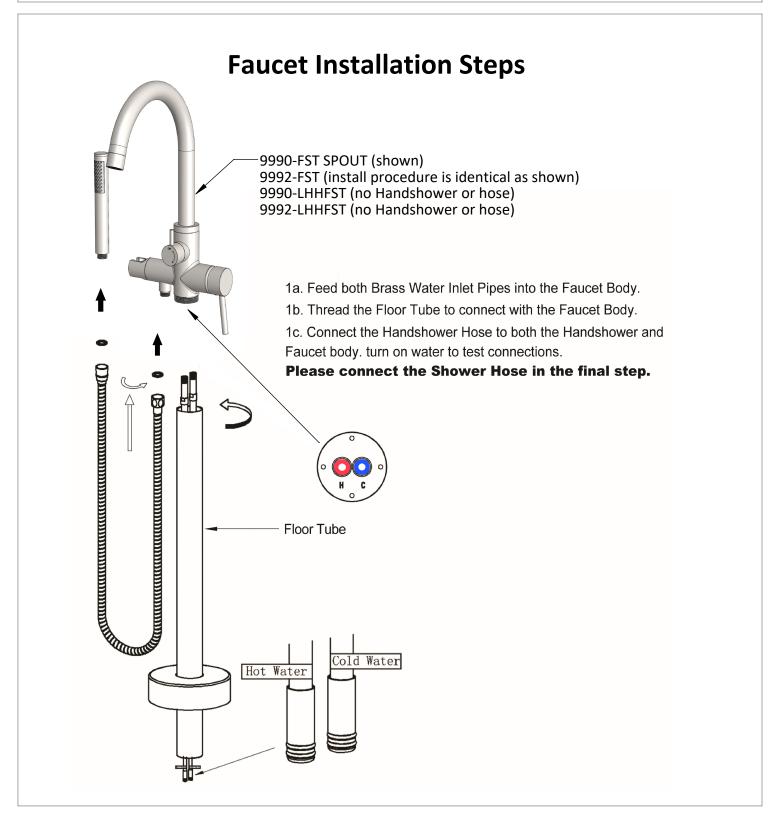


Concealed Box Rough for FST


Part #9990-FST-BOX-RGH




Concealed Box Installation Steps




- 1. Confirm the proper position for the Concealed
- Box and reserve the hole at ø3.25-3.5 in.

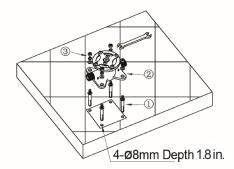


- 2a. Drill 4 holes with ø8mm drill bit at depth 1.8 in. for fixing Expansion Screws .
- 2b. Fix 4 (1) Expansion Screws into the holes.
- 2c. Put the ②Concealed Box through ①Expansion Screws and ensuring it is level (refer to levelling bubble on top plate)
- 2d. Tighten (3)the screws.

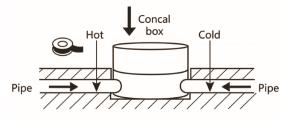

- 3a. Connect the water supplies to the Concealed Box.
- Pipe 3b. Wrap the threads on both the end of the pipes with tapes.

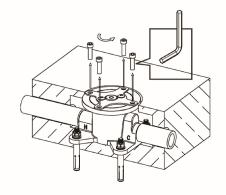



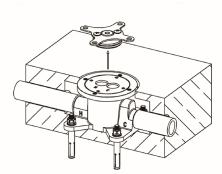

4. Loosen the hex nuts with hex wrench provided.

5. Remove the plate.


JACLO INDUSTRIES 129 Dermody Street, Cranford, NJ 07016 Phone: 908.653.4433 Fax: 908.653.1717 Web: jaclo.com

Concealed Box Rough for FST

Part #9990-FST-BOX-RGH



Concealed Box Installation Steps (continued)

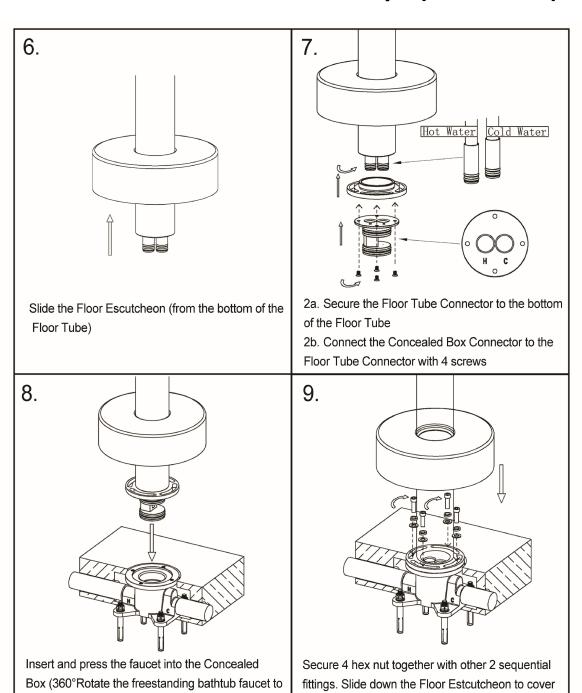

the Concealed Box

adjust the direction if necessary)

